


Addendum for Installing Ferrite Bead on the Emergency Power Off Wires

Emergency Power Off (EPO)

Install a Ferrite Bead

The supplied ferrite bead must be installed between the supplied EPO terminal block and the EPO switch.

NOTE: Be sure that two (2) turns of the wires are wound on the Ferrite Bead.

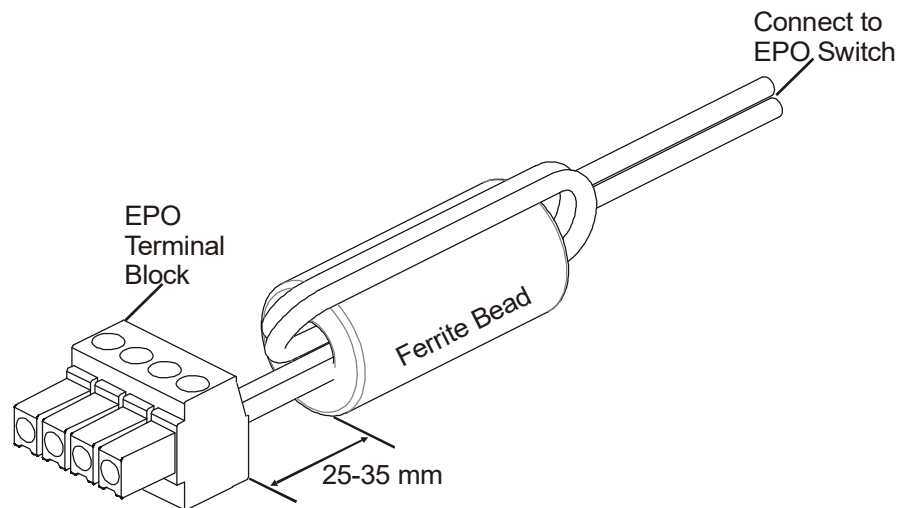

Customer support and warranty information is available at the APC Web site, www.apc.com.

© 2021 APC by Schneider Electric. Schneider Electric, Life is On | Schneider Electric, the Schneider Electric logo, APC, the APC logo and Smart-UPS are owned by Schneider Electric Industries S.A.S., American Power Conversion Corporation, or their affiliated companies. All other trademarks are property of their respective owners.

EN 990-6556
12/2021