

Erie Thermostatic Change-Over Switch Kit on Motortrol® Valves


Application

The following provides instructions for installing the thermostatic change-over switch on Motortrol® valves.

Installation

1. Remove the valve cover and bring the three leads from the change-over thermostat through the hole in the baseplate and install a strain relief bushing.

2. Attach the white lead from the change-over thermostat to the motor lead, using a wire nut.
3. Attach the long white lead, provided, to the other motor lead, using a wire nut.
4. Bring all three leads, as shown, through the conduit bushing and install a strain relief bushing.
5. Replace the valve connector, install the valve, and fasten the change-over thermostat to the inlet pipe with the clip.

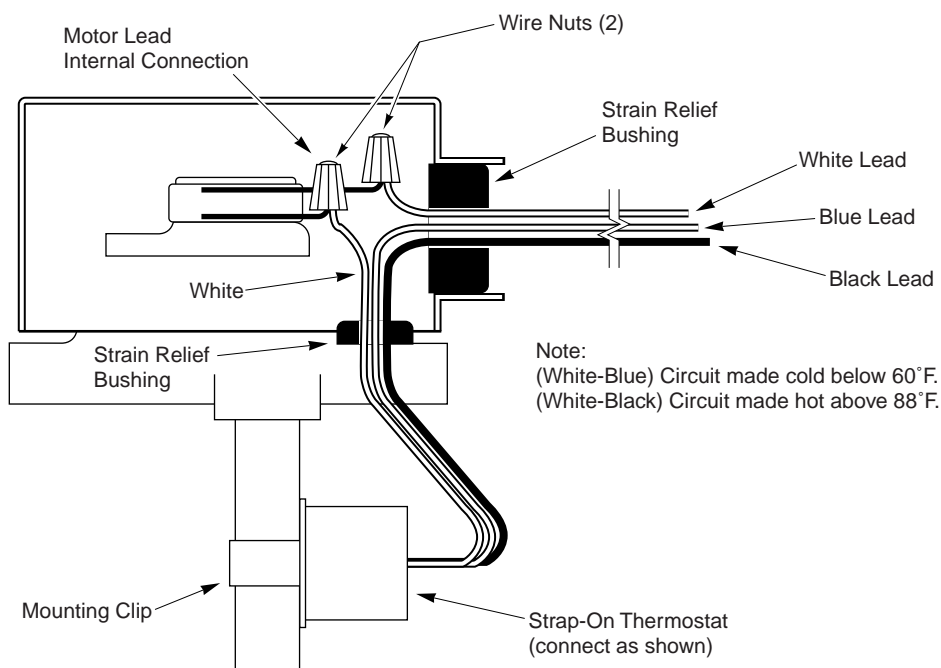

On October 1st, 2009, TAC became the Buildings business of its parent company Schneider Electric. This document reflects the visual identity of Schneider Electric, however there remains references to TAC as a corporate brand in the body copy. As each document is updated, the body copy will be changed to reflect appropriate corporate brand changes.

Copyright 2010, Schneider Electric
 All brand names, trademarks and registered trademarks are the property of their respective owners. Information contained within this document is subject to change without notice.

Schneider Electric
 1354 Clifford Avenue
 P.O. Box 2940
 Loves Park, IL 61132-2940

www.schneider-electric.com/buildings

Schneider
 Electric