

Galaxy RPP

Receiving

External Inspection

When the shipment arrives, inspect the shipping material for any signs of damage or mishandling. Do not attempt to install the system if a damage is apparent. If any damage is noted, contact Schneider Electric and file a damage claim with the shipping agency within 24 hours.

Compare the components of the shipment with the bill of lading. Report any missing items to the carrier and to Schneider Electric immediately.

Verify that labelled units match the order confirmation.

Storage temperature	-25 °C to 55 °C (-13 °F to 131 °F)
Storage relative humidity	10 to 90% non-condensing
Weight	Max. 280 kg (617.29 lbs) with packaging and pallet Max. 250 kg (551 lbs) without packaging and pallet

Unpack the Cabinet

⚠ WARNING

TIP HAZARD

The cabinet is top-heavy and can tip over. Move and store with care until it is time to anchor the cabinet to the floor and wall.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

⚠ CAUTION


HEAVY LOAD

Use adequate lifting/transport equipment.


Failure to follow these instructions can result in injury or equipment damage.

1. Unlock and open the front door.


2. Remove the four screws in the bottom of the cabinet.

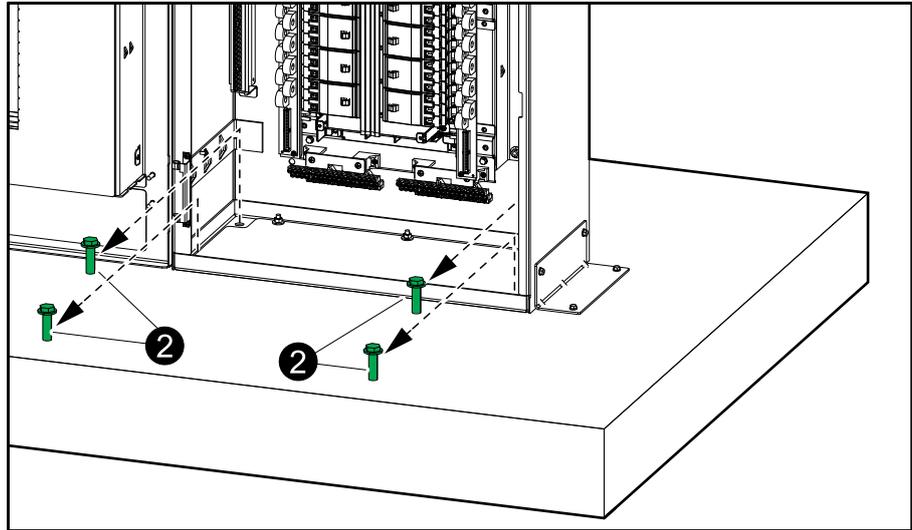

3. Close and lock the front door.
4. Remove the left and right anchoring brackets. Save the screws.

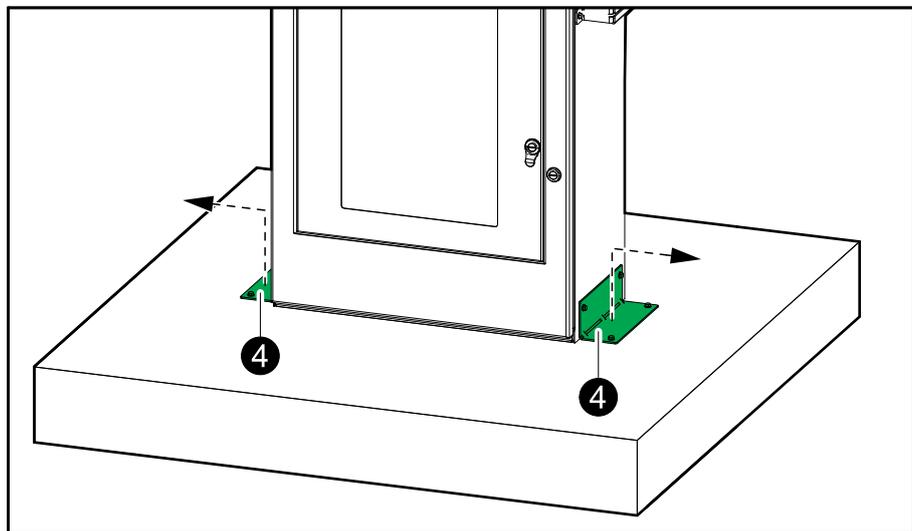

5. Move the cabinet down from the pallet. Hold onto the top to keep the cabinet balanced while moving.
6. Reinstall the screws in the sides of the cabinet.

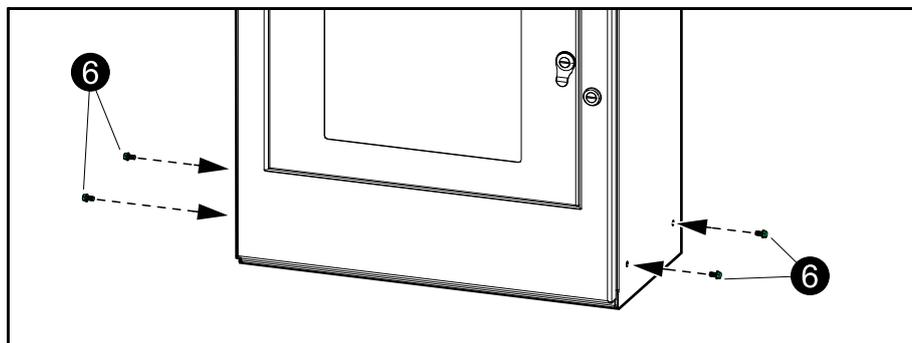

7. The handles can be removed once the cabinet is in the final position – reinstall the screws in the sides of the cabinet.