




AMERICAN POWER CONVERSION

Matrix-UPS Cart (MXA006) Instructions

Thank you for selecting the MXA006 Matrix-UPS cart. Please read the following instructions before using the cart.

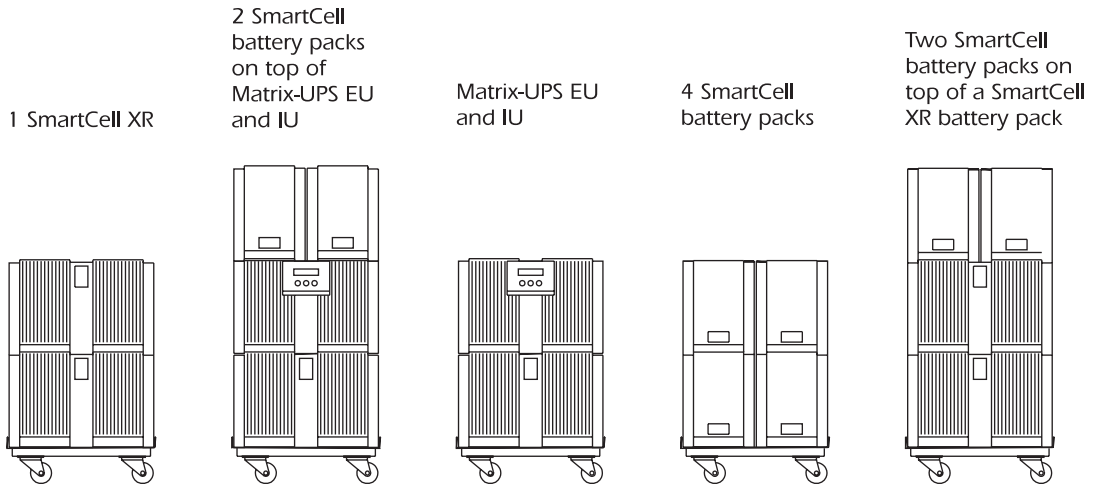

The Matrix-UPS cart will safely support any of the load configurations shown above. These are:

- ▼ One SmartCell XR battery pack
- ▼ Two SmartCell battery packs on top of the Matrix-UPS EU and IU
- ▼ One Matrix-UPS EU and IU
- ▼ Four SmartCell battery packs
- ▼ Two SmartCell battery packs on top of a SmartCell XR battery pack.



CAUTION!

Please observe the following precautions when using the MXA006 Matrix-UPS cart.

- ▼ Use care when moving the cart-mounted UPS components. The components are heavy enough to stay on the cart under normal conditions, but they are not secured to the cart.
- ▼ Do not use this cart in “hard-wired” UPS applications.
- ▼ Always push the Matrix-UPS cart from the side where the wheel locks are located.
- ▼ Always set the wheel locks before leaving the UPS components.