


Vigilohm HRP : function and user guide

User interface of the electrical installation monitoring system of operating theatres

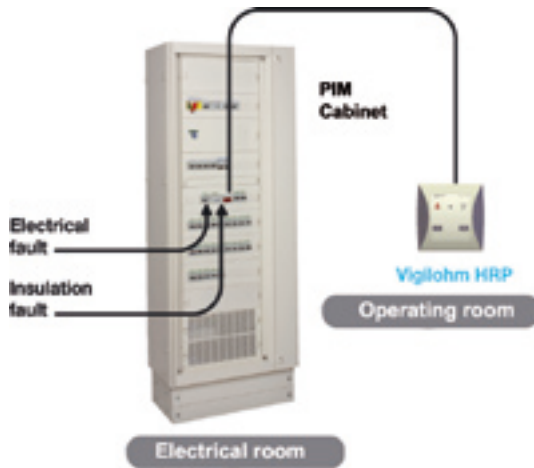

Wall-mounted in the operating theatre, Vigilohm HRP informs medical personnel , in real time, of electrical installation right operation and in the event of:

- insulation fault of circuit powering medical electrical equipment
- circuit-breaker fault tripping or overload of the isolation transformer

Functions identification




Visual alarm on insulation fault

Right operation lamp


Visual alarm on electrical fault (overload or overheating transformer or circuit-breaker fault tripping)

Test button of the insulation monitoring system (daily test in compliance with IEC 60364-7-710 standard)

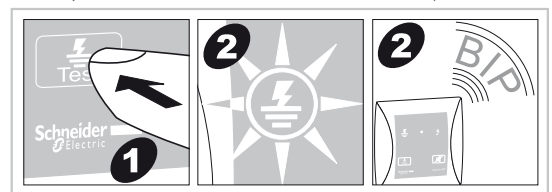

Audible alarm stoppage, in case of insulation fault or electrical fault

The alarm volume setting is made at the mounting phase (available in the rear)

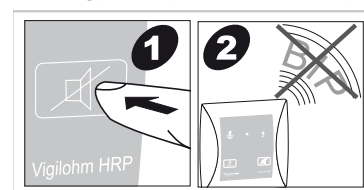

Schneider Electric Industries SAS

Siège social
35, rue Joseph Monier - CS30323
F92505 Rueil-Malmaison Cedex
FRANCE
www.schneider-electric.com

As standards, specifications and designs change from time to time, please ask for confirmation of the information given in this publication.

Design : Schneider Electric

Printed :