

Wiser 16 A Relay for Temperature Control

Device user guide

Information about features and functionality of the device.

05/2023

Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

Table of Contents

Safety information	4
Wiser 16 A Relay for Temperature Control	5
For your safety	5
About the device.....	5
Installing the device	6
Pairing the device	6
Configuring the device	8
Renaming the device	8
Setting the device location	8
Setting the device control	9
Selecting the floor sensor	10
Offsetting the floor sensor.....	11
Setting the floor sensor Upper/Lower limit.....	12
Identifying the device	13
Using the device.....	14
Setting the room temperature using the app.....	14
Emergency Heating	15
Creating a moment	15
Creating an automation	17
Removing the device	23
Resetting the device	24
LED indications	24
Troubleshooting	25
Technical Data	26

Safety information

Important information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that accompany this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

Failure to follow these instructions will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Wiser 16 A Relay for Temperature Control



CCTFR6700

For your safety

<i>NOTICE</i>
RISK OF DAMAGE TO DEVICE Always operate the product in compliance with the specified technical data. Failure to follow these instructions can result in equipment damage.

About the device

The Wiser 16A Relay (hereinafter referred to as **Relay**) is used to control electrical heaters or electric underfloor heating with On/Off commands or Fil Pilote commands. The fil pilote is a single control wire interface for controlling multiple heaters from a Relay. It can control heaters up to 3000 W.

TIP: Pair with Wiser Room Thermostat to control electric heaters or electric underfloor heating.


Features of the Relay:

- Remotely control electrical heating using the Wiser Home app.
- Boost the room temperature using the Wiser Room Thermostat center button.

Diagram of operating elements

A. Set button

B. LED

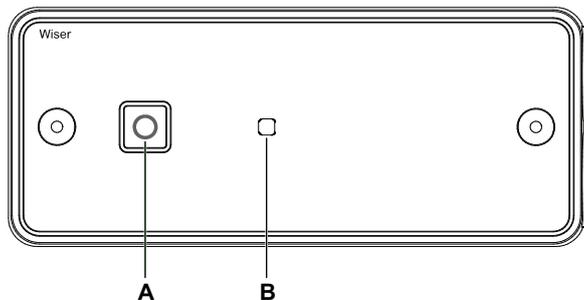

Installing the device


Refer to the installation instruction supplied with this product.
See installation instructions.

Pairing the device


Using the Wiser Home app, pair your Relay with the **Wiser Hub** to access and control the Relay.

To pair the Relay:

1. On the Home page, tap .
2. Tap **Devices** >  and tap **Climate** > **16A Relay**.
3. Tap **Next**.

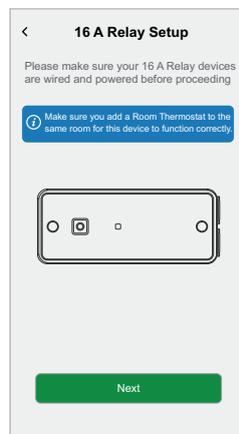


4. Press the Set button until the LED flashes green/amber.

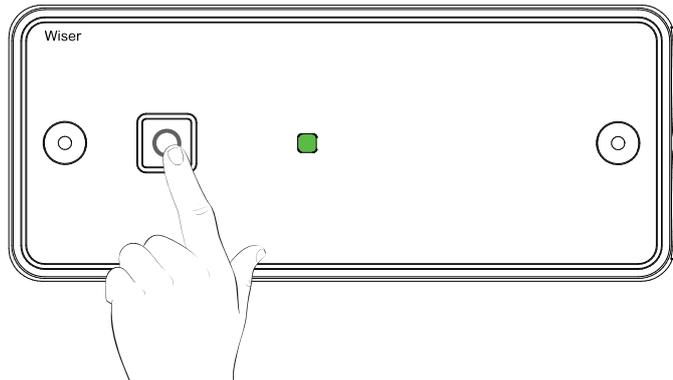

TIP: The next screen shows the process of joining the Relay.

5. Please wait for a few seconds until the Relay is successfully joined.
In the app, you can see the Relay is successfully joined.

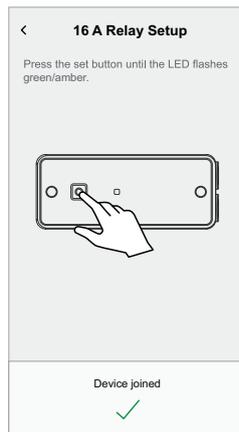

6. On the **16A Relay Setup** page, select the control type **Relay** or **Pilot wire**.
7. Tap **Next** to enter the Relay name and assign it to an existing room or a new room.

You can see the added the Relay on the Home page under the room tab or under **ALL** devices.


Configuring the device

Renaming the device

You can rename the device using the Wiser Home app.

1. On the Home page, tap .
2. Tap **Devices > Climate > 16A Relay > Name (A)** to rename the device.

NOTE: Type and icon (B) are both assigned automatically, based on whether you have radiators or floor heating. You will be able to view this only after the pairing is completed.

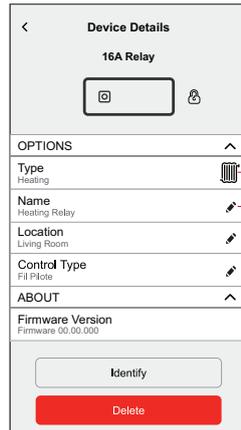


Setting the device location

Using the Wiser Home app, you can assign the Relay in the room (such as bedroom, living room, dining room etc.).

To assign the Relay location:

1. On the Home page, tap .
2. Tap **Devices > Climate > 16A Relay > Location (A)** to assign the Relay to the existing room or a new room (B) and tap **Submit**.

NOTE: You can configure up to 4 Relays in the same room.

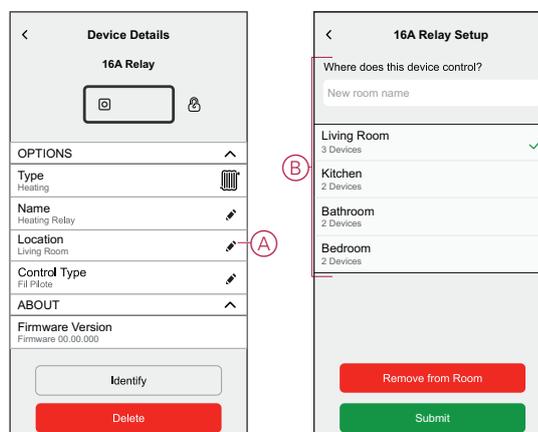


Setting the device control

Using the Wiser Home app, you can control the electrical heaters or electric underfloor heating by selecting Relay or Pilot Wire.

To set the Relay control:

1. On the Home page, tap .
2. Tap **Devices > Climate > 16A Relay > Control type (A)** and select **Relay** or **Pilot Wire**.
3. Tap **OK (B)**.

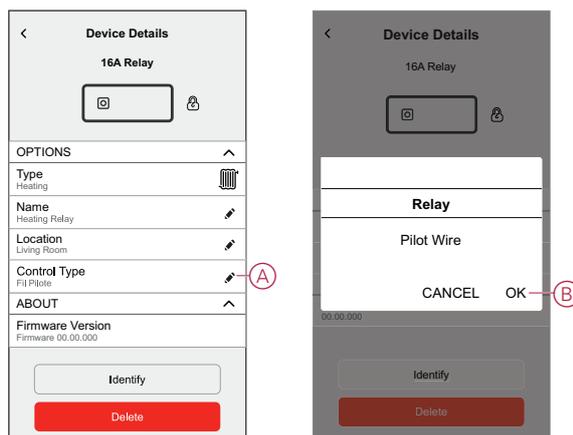

Selecting the floor sensor

Using the Wiser Home app, you can select the type of floor sensor that you have installed in case of using electric underfloor heating. The floor sensor measures the floor temperature and displays in the app. This option appears only if you have selected the **Relay** as **Control Type**.

DANGER

RISK OF FATAL INJURY FROM ELECTRIC SHOCK

The device is not a Safety Extra Low Voltage (SELV) device. The sensors lines are on mains (230 VAC) line.

- Only use sensors with the appropriate insulation rating.

Failure to follow these instructions will result in death or serious injury.

To select the floor Sensor:

1. On the Home page, tap .
2. Tap **Devices > Climate > 16A Relay > Floor Sensor (A)** and select the sensor from the list.
 - **NTC 10K**
 - **NTC 12K**
 - **NTC 15K**
 - **NTC 33K**
 - **NTC 47K**


NOTE: Not fitted is selected by default.

3. Tap **OK**.



Once the floor sensor is selected, new options (B) appear in the app.

- **Floor Temperature** - It shows the temperature of the floor measured by the floor sensor.
- **Floor Sensor Offset** - Allows you to calibrate the floor sensor to match the actual temperature of the floor.
- **Floor Sensor Upper Limit** - The upper limit is set to maintain the floor temperature below the set limit.
- **Floor Sensor Lower Limit** - The lower limit is set to maintain the floor temperature above the set limit.

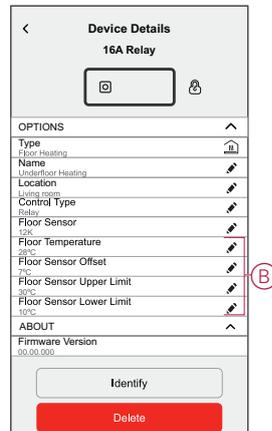

Offsetting the floor sensor

Using Wiser Home app, the **Floor Sensor Offset** option allows you to calibrate the floor sensor to match the actual temperature measured by an external device.


To offset the floor sensor:

1. On the Home page, tap .
2. Tap **Devices > Climate > 16A Relay > Floor Sensor Offset (A)** and select the temperature that is required for offsetting, to match the actual temperature.

3. Tap **OK**.**NOTE:**

- The allowed temperature range to offset the floor sensor is 9 °C to -9 °C.
- The floor temperature shows the final temperature of the floor including any offset that is applied.

TIP: Offsetting the floor sensor is not required, if the floor temperature measured by the floor sensor and an external device are same. You can set it to 0 °C.

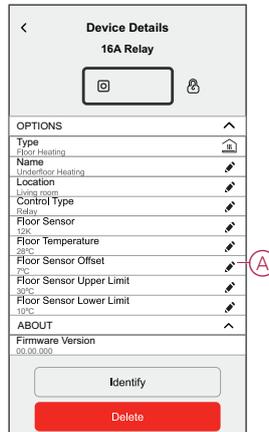

Setting the floor sensor Upper/Lower limit

Using the Wiser Home app, you can switch on/off the electrical underfloor heater by setting lower/upper temperature limit. This allows you to maintain the floor temperature within the set limits.

To set the floor sensor temperature limit:


1. On the Home page, tap .
2. Tap **Devices > Climate > 16A Relay**.
3. Tap **Floor Sensor Upper Limit/ Floor Sensor Lower Limit (A)** and set the upper/lower temperature limit.

NOTE:

- Upper limit range is 5 °C to 40 °C.
- Lower limit range is 4 °C to 39 °C.

4. Tap **OK**.

TIP: You can select **Disabled**, if setting the floor sensor limit is not required.

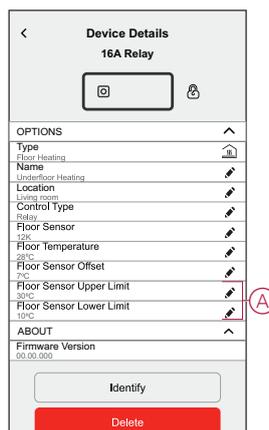

Identifying the device

Using the Wiser Home app, you can identify the Relay from the other available devices in the room.

To identify the Relay:

1. On the Home page, tap .
2. Tap **Devices > 16A Relay > Identify (A)** to rename the Relay.

NOTE:

- This feature flashes the Relay LED, so you can identify the actual device.
- The Relay LED will continue to flash until you tap **OK**.



Using the device

Setting the room temperature using the app

Using the Wiser Home app, you can adjust, set or boost the room temperature.

Precondition: Add a Wiser Room Thermostat in the same room where 16A Relay is located.

To adjust, set or boost the room temperature:

1. On the Home screen, tap  from the room tab or **All** tab.

TIP: The orange flame shows the heating is on.


- a. Use the slider control on the right of the screen to adjust the temperature.

NOTE: The flame shows that the room temperature is lower than the desired temperature (set point) and so the heating is ON.

- b. Tap  to set the boost time.

TIP: You can Boost the room temperature using the Wiser Room Thermostat center button.


NOTE: Boost can be stopped at any time by tapping the  and selecting it **off**.

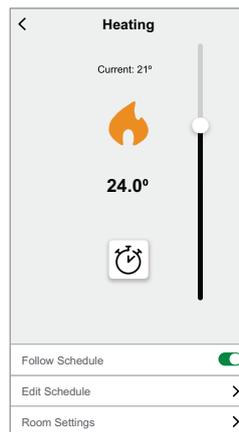

IMPORTANT: If you have installed both PowerTag and Relay, you can monitor the powerflow and energy consumption in the **Energy** tab. For more information, refer to Energy view of individual devices.

Emergency Heating


You can do emergency heating by pressing the Relay Set button when the Hub is not working or the Wiser Home app heating control is not responding.

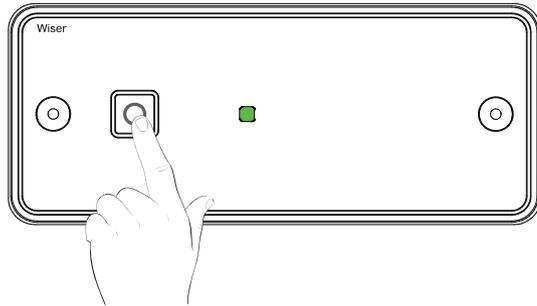


Creating a moment

Moment allows you to group multiple actions that are usually performed together. By using the Wiser Home app, you can create moments based on your needs. To create a moment:


1. On the **Home** page, tap .
2. Go to **Moments** >  to create a moment.
3. Enter the name of the moment (A).
TIP: You can choose the cover image that best represents your moment by tapping .
4. Tap **Add actions** (B) to select the list of devices.

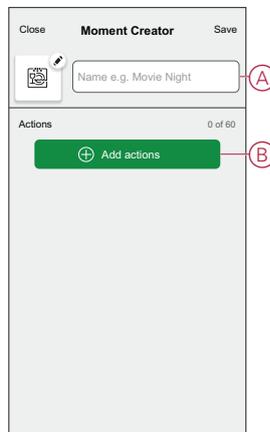

5. In the **Add actions** menu, you can select the devices (C).

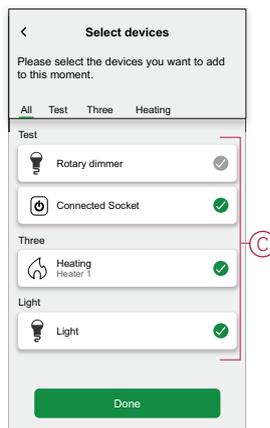

6. Once all the device are selected, tap **Done**.
7. On the **Moment creator** page, tap the device to set the condition. For example, select heating.
 - Set the required temperature using sliding bar (D).

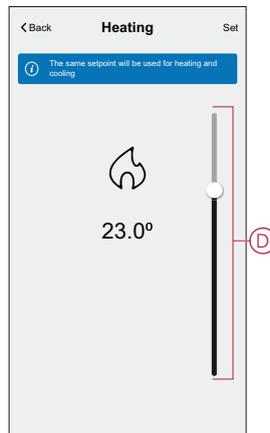

When the desired condition is set, tap **Set**.


8. Once all conditions are set, tap **Save**.

Once the moment is saved, it is visible on the **Moments** tab. You can tap on the moment to enable it.

Editing a moment

To edit a moment:

1. On the **Home** page, tap .
2. Go to **Moments**, locate the moment you want to edit and tap  (A).
3. On the **Moment Editor** page, you can tap each item to change the settings and tap **Save** (B).

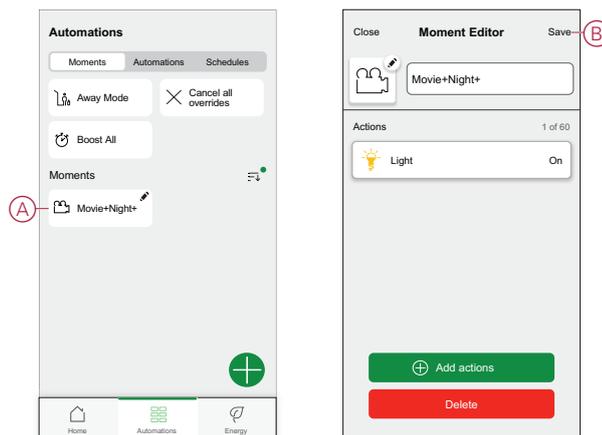


Deleting a moment

To delete a moment:

1. On the **Home** page, tap .
2. Go to **Moments**, locate the moment you want to delete and tap  (A).

3. On the Moment Editor page, tap **Delete** (B) and tap **Ok**.

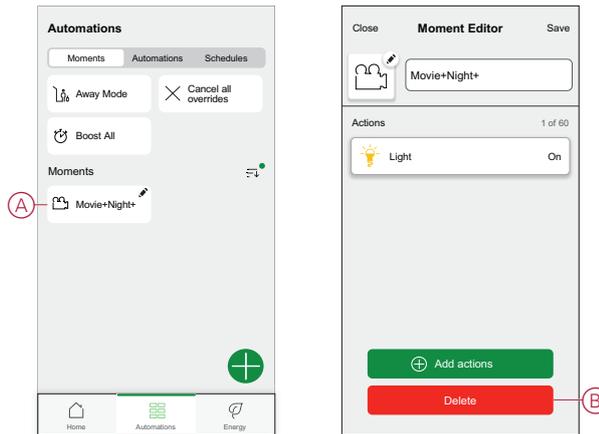

Creating an automation


An automation allows you to group multiple actions that are usually done together, triggered automatically or at scheduled times. By using the Wiser app, you can create automations based on your needs.

To create an automation:

1. On the **Home** page, tap .
2. Go to **Automation** >  to create an automation.

NOTE: Max. 10 automations can be added.



3. Tap **If** (A) and select any of the following conditions (B):
 - **All conditions:** This triggers an action only when all conditions are met.
 - **Any condition:** This triggers an action when at least one condition is met.

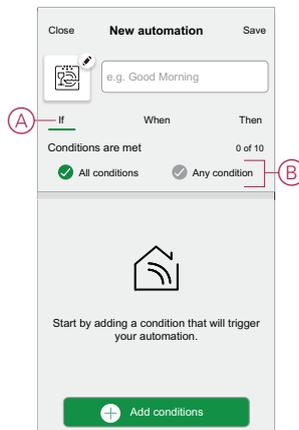

4. Tap **Add conditions** and select any of the following (C):


- **Device status change:** Select a device to enable automation.
- **Away Mode:** Enable/Disable away mode to trigger an action.

TIP: Away mode can also be used as a trigger to turn off the lights, dimmer or closing the shutter etc. For more information refer to *Away mode*.

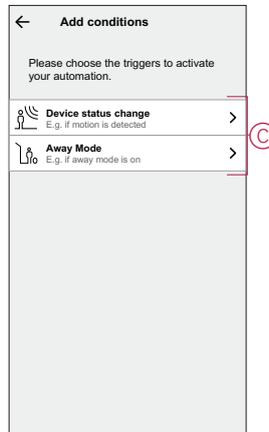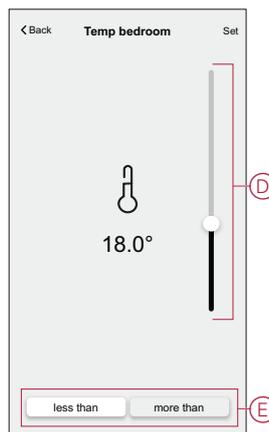5. Tap **Device status change > Temperature/Humidity Sensor > Temperature**, Set the temperature using sliding bar (D) and select the condition (E) (less than / more than), then tap **Set**.**NOTE:**

- Max. 10 conditions can be added.
- To remove an added condition, swipe left and tap .

6. To set a specific time for your automation, tap **When > Add time** and select any of the following (F):
 - **Specific time of the day: Sunrise, Sunset, Custom.**
 - **Period of time: Daytime, Night time, Custom.**

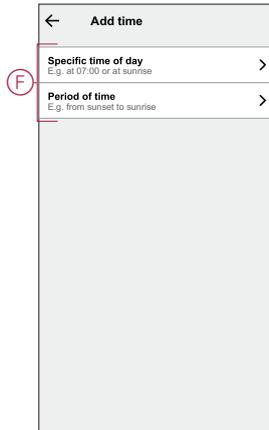


NOTE:


- Max. 10 entries can be added
- To remove a specific time, swipe left and tap .

7. To add an action, tap **Then > Add an action** and select any of the following (G):


- **Control a device:** Select a devices that you want to trigger.
- **Send notification:** Turn on the notification for the automation.
- **Activate a moment:** Select the moment that you want to trigger.

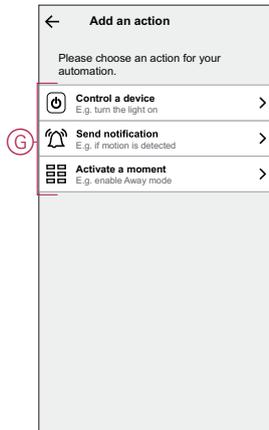

8. Tap **Control a device** > **Heating** and select any of the following (H):
- **Boost**: Set the duration to increase the temperature by 2° C.
 - **Setpoint**: Set the desired temperature.

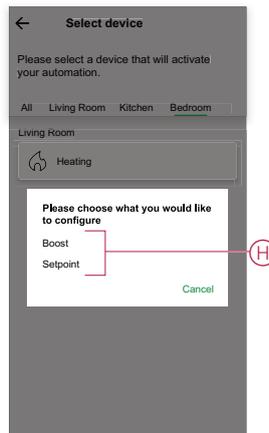

9. Tap **Setpoint**, set the required temperature using vertical sliding bar (I), then tap **Set**.

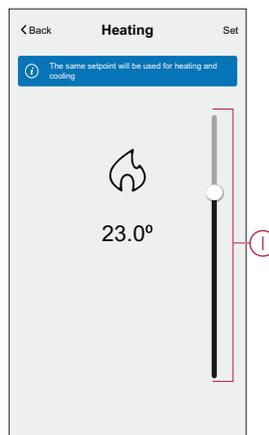


NOTE:

- Max. 10 actions can be added.
- To remove an action, swipe it left on the action and then tap .

10. Enter the automation name (J).


You can choose the cover image that represents your automation by tapping

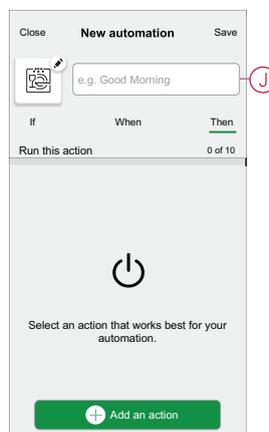

11. Tap **Save**.

Once the automation is saved, it is visible on the **Automation** tab.


Using the  (K) you can enable and disable the automation.

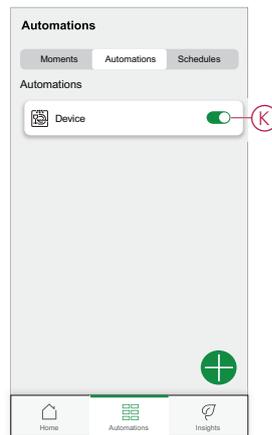

Example of an automation


This demonstration shows you how to create an automation to turn on the Heating to 20 °C when the temperature is less than 18 °C.

1. Go to **Automation** >  to create an automation.
2. To add a condition, tap **Add Condition** > **Device status change** > **Temperature/Humidity Sensor** > **Temperature**.
3. Set the temperature as 18 °C (A) and the condition as **less than** (B) and tap **Set**.

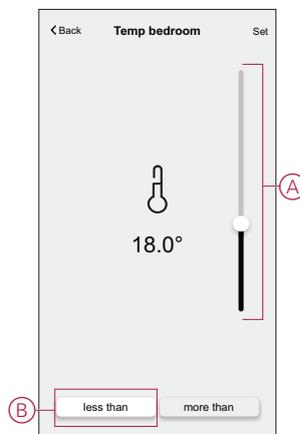

4. Read the information and tap **OK**.

5. To add an action, tap **Then** > **Add an action** > **Control a device** > **Heating** > **Setpoint**. Set the temperature to 20 °C (C), then tap **Set**.

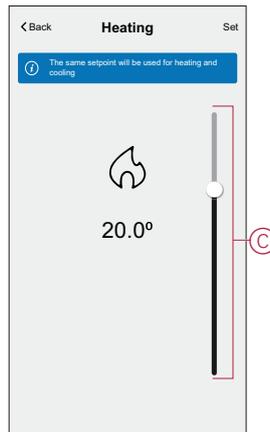


6. Read the information and tap **OK**.

7. Enter the name of the automation.

TIP: You can choose the cover image that represents your automation by tapping .

8. Tap Save.

Once the automation is saved, it is visible on the Automation tab.

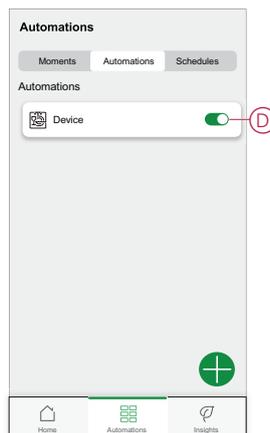


NOTE: You can enable or disable saved automations on the **Automations** tab by using  (D).

Editing an automation

To edit an automation:

1. On the **Home** page, tap .
2. Go to **Automation**, tap the automation you want to edit.
3. On the **Edit automation** page, you can:
 - Change the icon.
 - Rename the automation.
 - Change/Delete the condition or action.

4. Remove the Condition or Action by swiping it to the left and tapping the **bin** (A).

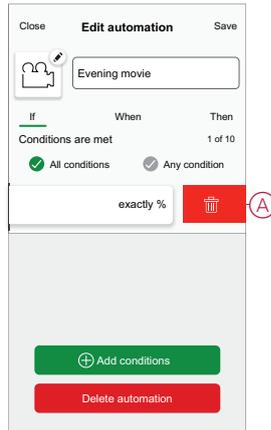


5. Add a new condition or action and then tap **Save**.

Deleting an automation

To delete an automation:

1. On the **Home** page, tap .
2. Go to **Automation**, tap the automation you want to delete .
3. On the Edit automation page, tap **Delete Automation** (A) and tap **Ok**.

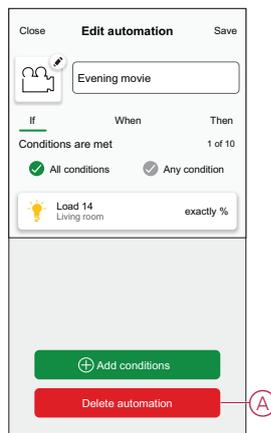

Removing the device

Using the Wiser home app, you can remove the relay from the Wiser system.
To remove the relay:

1. On the Home page, tap .


2. Tap **Devices > 16A Relay > Delete (A)**.



Resetting the device

You can reset the Relay to the factory default. It can be reset manually at any time, e.g., when the Hub is replaced. To reset the Relay:

1. Press and hold the Set button for > 20 seconds.
After 15 seconds, the LED flashes red.

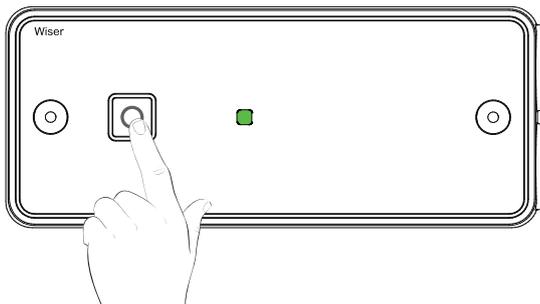

2. When the LED stops flashing red, release the Set button.
The LED stops flashing upon successful reset of the Relay.

LED indications

Normal use

Status	User Interaction	Description
Power on		Flashing orange
In connection with the Wifi gateway		Off: heating off Steady
		green: heating on
Pairing in progress		Alternating orange and green flashing
Not paired		Off: heating off
		Steady orange: heating on

Normal use (Continued)

Degraded mode (no connection with the thermostat or with the gateway)		Flashing red: heating off
		Steady red: heating on
Manual Test / Forcing		Flashing green: heating on due to forcing

Troubleshooting

Symptom	Possible cause	Solution
The relay displays offline in the app or the LED flashing or solid red.	<ol style="list-style-type: none"> 1. Weak or no signal between the Wiser Hub and the relay. 2. The relay is working in degraded mode. 	<ol style="list-style-type: none"> 1. Check Hub is online. 2. Check signal strength.
The relay is flashing green.	Emergency heat is active.	Press the button to cancel the emergency heat function.

Technical Data

Rated voltage:	230 V, 50 Hz (AC ONLY)
Power consumption:	7.3 W
Purpose of control:	Electrical Control, Manual + Automatic Control, Sensing Control
Type of load and rated current:	16 A Resistive or (A3) Inductive Load Circuit for pilot load (FP)
IP rating:	IP44
Terminals and Wiring:	Suitable for conductor sizes 1.0 - 2.5 mm ² Insulation strip length 6.5 mm
Operating Temperature:	0 °C to 60 °C
Storage Temperature:	-20 °C to 65 °C
Class of control:	Class II
Method of mounting control:	Independently mounted control
Method of providing earthing control:	The control is not earthed Terminals are provided for linking external earthing conductors.
Method of attachment for nondetachable cords:	Type Y attachments
Extent of sensing element: (if installed)	External temperature sensor temperature setting range of 5 °C to 30 °C ±5%
Operating Value:	User variable time control of electrical/heating system (only at system level through Hub controllers)
Degree of pollution:	2
Rated impulse voltage:	4 kV
Ball pressure test:	115 °C
Software class:	A
Radio Technology/ Frequency:	2.4 GHz
Radio signal range:	30 m in free space
Maximum radio frequency power transmitted:	+13 dBm (20 mW)
Product dimensions: (H x W x D)	162 x 67 x 30 mm
Communication protocol:	Zigbee 3.0 certified
Compatible floor sensors in case of electric underfloor heating:	<ul style="list-style-type: none"> • 33kΩ Schneider Electric Reference MTN616790 • 33kΩ Eberle Reference F193720 • 15kΩ Devi Reference 140F1091 • 10kΩ Elko Reference 5491605

Compliance

Compliance information for Green Premium products

Find and download comprehensive information about Green Premium products, including RoHS compliance and REACH declarations as well as Product Environmental Profile (PEP) and End-of-Life instructions (EOLI).

<https://checkaproduct.se.com/>



General information about Green Premium products

Click the link below to read about Schneider Electric's Green Premium product strategy.

<https://www.schneider-electric.com/en/work/support/green-premium/>



Trademarks

This guide makes reference to system and brand names that are trademarks of their relevant owners.

- Zigbee® is a registered trademark of the Connectivity Standards Alliance.
- Apple® and App Store® are brand names or registered trademarks of Apple Inc.
- Google Play™ Store and Android™ are brand names or registered trademarks of Google Inc.
- Wi-Fi® is a registered trademark of Wi-Fi Alliance®.
- Wiser™ is a trademark and the property of Schneider Electric, its subsidiaries and affiliated companies.

Other brands and registered trademarks are the property of their respective owners.

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

+ 33 (0) 1 41 29 70 00

www.se.com

As standards, specifications, and design change from time to time,
please ask for confirmation of the information given in this publication.

© 2021 – 2023 Schneider Electric. All rights reserved.

DUG_Wiser 16A Relay for Temperature Control_WH-03