


## CLASS 9998 TYPE PC 265 FOR CLASS 9998 TYPE PC 233, 295, 301, SEE REVERSE SIDE




- Remove ten (10) mounting screws (1) from actuator module. If the device has a mounting bracket (2) four screws will be longer, these must be reinstalled in the same locations during step 4.
- 2. Remove and discard old diaphragm assembly (3), and gasket (4).
- Assemble actuator with new gasket and diaphragm assembly as shown.
- Reinstall ten (10) mounting screws (1) and tighten to 10-16 inchpounds.



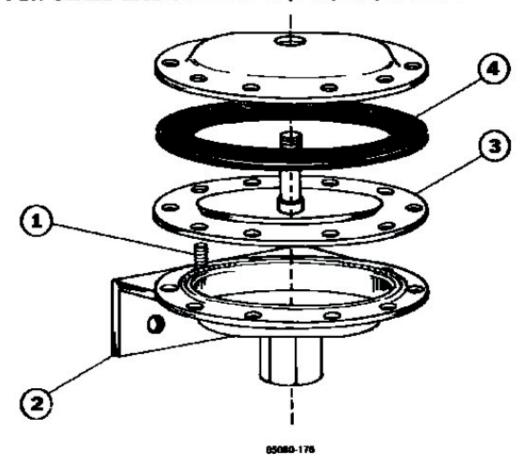

April 2003

## CLASS 9998 TYPE PC 233, 295, 301, FOR CLASS 9998 TYPE PC 265, SEE REVERSE SIDE CLASS 9016

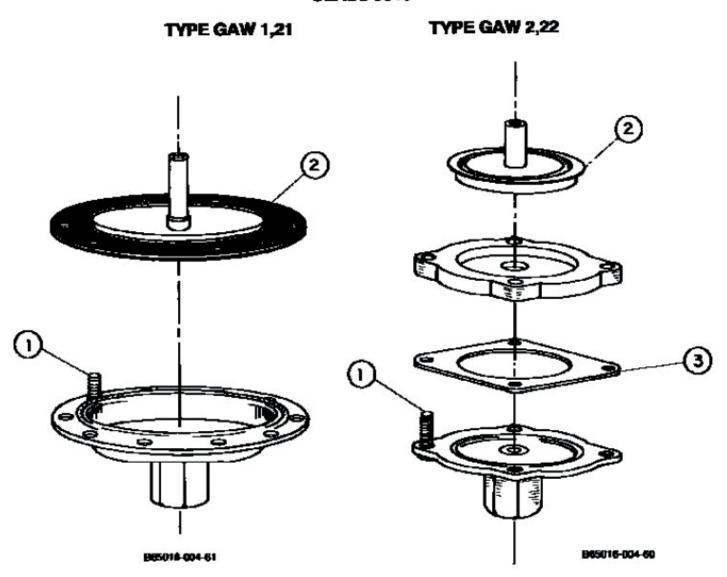

- Remove flange mounting screws (1) from actuator module.
- Remove old diaphragm assembly (2) by rotating counterclockwise, and discard old diaphragm assembly (2).
- Assemble actuator module with new diaphragm assembly (2) as shown.

NOTE: Rotate assembly clockwise until it bottoms, then rotate counterclockwise approximately 1/2 turn.

Reinstall flange mounting screws (1) and tighten 8 to 10 inch-pounds.

