

SpaceLogic Sensors

SLP Series Humidity Sensors – BACnet and Modbus

SLP Series Temperature Sensors – BACnet and Modbus



Note: A subset of models shown.

Product Description

The SpaceLogic SLP Series of humidity and temperature sensors for living space is a flexible multisensor platform for use with BAS controllers designed to accept BACnet or Modbus outputs. Housings are available in Medium matte white and Optimum faces available in black and white. All housing types are available with three user interface options: touchscreen, LCD with three buttons and blank. Temperature sensors are included with all SLP Series humidity sensors.

Features

- Medium matte white housing or optimum glass panel housing available in white or black
- Replaceable RH element available in 1% & 2% with NIST certificate
- Temperature output on all models
- 61 mm (2.4") backlit color touchscreen and LCD, three button display options available
 - Digital temperature indication (0.1° display resolution of °F or °C)
 - Digital humidity indication (0.1% RH display resolution)
 - Temperature, RH and fan speed setpoints
 - Configurable screen/button lock and display timeout
 - Override
- Selectable BACnet MSTP and Modbus outputs via RS-485
- 18-24 AWG screw terminals

Available Products Matrix

SLP	Housing	User Interface		RH Sensor*	Example:
			X		SLP
	S = Medium white matte housing W = Optimum white housing B = Optimum black housing	T = Color touchscreen L = 3-button LCD display X = None		2 = 2% X = None	

*Replaceable RH module available to be ordered separately per table below.

Replaceable RH Elements

Model	RH Accuracy	Calibration Certificate	Description
SLXRHS1N	±1%	X	Replaceable RH sensor, 1% with NIST certification
SLXRHS2N	±2%	X	Replaceable RH sensor, 2% with NIST certification
SLXRHS2X	±2%		Replaceable RH sensor, 2%

USA: +1 888-444-1311
Europe: +46 10 478 2000
Asia: +65 6484 7877
www.schneider-electric.com




Specifications

Operating Environment	
Input power	Class 2; 20 to 30 Vdc, 24 Vac, 50 to 60 Hz
Protocol output	BACnet or Modbus via RS-485, selectable
Operating temp. range	0 to 50 °C (32 to 122 °F)
Operating humidity range	0 to 95% RH non-condensing
Housing material	High impact ABS plastic
IP rating	IP 30
Mounting location	For indoor use only. Not suitable for wet locations.
Surface mount	The device can be surface mounted on Single Gang J-Box, British Standard and CE60 wall boxes
RH Sensor	
HS sensor	Solid state capacitive, replaceable
Accuracy (includes hysteresis)*	±3.8% RH from 10 to 60% RH @ 25°C (77 °F) ±4.8% RH from 60 to 80% RH @ 25°C (77 °F) ±5.8% RH from 80 to 100% RH @ 25°C (77 °F)
Linearity	Included in accuracy specification
Stability	±1% @ 20°C (68 °F) annually for 2 years
Output range	0 to 100% RH
Temperature coefficient	±0.1% RH/°C above or below 25 °C (77 °F) typical
Temperature Sensor	
Sensor type	Solid state, integrated circuit
Accuracy	±0.2 °C (±0.4 °F) typical
Resolution	0.1 °C (0.1 °F)
Range	0 to 50 °C (32 to 122 °F)
Display Models	
Touchscreen	61 mm (2.4 in), color, backlit, capacitive, 240x300px Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout
LCD	52mm (2.05 in), segmented with 3 buttons Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout
Setpoints**	
Temperature setpoint	Scale: 0 to 50 °C (32 to 122 °F) max., adjustable span
RH setpoint	Scale: 0 to 100% RH
Fan speed setpoint	Off, Low, Med., High, Auto
Override	
Override button	Display models feature a momentary override button

Wiring Terminals	
Terminal blocks	Screw terminals, 18-24 AWG
Screw terminal torque	0.2 N-m (2.0 in-lbF) max.
Regulatory Information	
UL 916, European conformance CE: EN61000-6-2 EN61000-6-3 EN61000 Series - industrial immunity EN 61326-1 FCC Part 15 Class B, REACH, RoHS, Green Premium, RCM (Australia), ICES-003 (Canada), EAC (Russia), UKCA (UK)	
Agency approvals	

*Humidity sensor overall accuracy should include: accuracy, temperature coefficient and stability. Humidity accuracy is shown as an absolute value, so if testing accuracy with a hand-held device, you must check for deviation in its readings instead of calculating the percentual deviation. Additionally, you must consider the overall accuracy of the hand-held device in the comparison.

** On display models only.

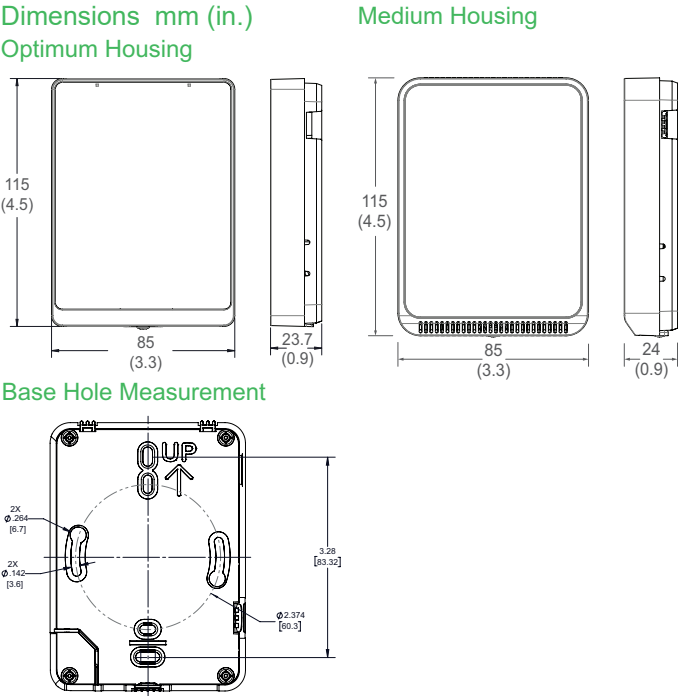

USA: +1 888-444-1311
Europe: +46 10 478 2000
Asia: +65 6484 7877
www.schneider-electric.com



Safety Information

Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special message may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.

NOTICE

NOTICE is used to address practices not related to physical injury.

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided **could result in death or serious injury**.

Please Note

Electrical equipment should be installed, operated, serviced and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has the skills and knowledge related to the construction, installation and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Safety Precautions

⚠ WARNING



HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors and covers before turning on power to this equipment.

Failure to follow these instructions can result in death, serious injury or equipment damage.

This product is intended for use in HVAC and building environmental control applications.

It is not intended for direct medical monitoring of patients.

Read and understand these instructions before installing this product.


The installer is responsible for all applicable codes.

If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired. No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.

NOTICE

PRODUCT DAMAGE AND INACCURATE READINGS

- Mount product vertically at a height that is between 3 to 5 feet (0.9 to 1.5 meters) above the floor [or 4 feet (1.2 meters) where the Americans with Disabilities Act needs to be followed]
- Mount product on a wall that is NOT exposed to the outside
- Install product far from windows, heat sources, door frames and at a minimum distance of 6 inches (15 centimeters) from any corner
- Drafts through conduits or other holes in the wall should be eliminated by plugging appropriate material into the cavity.
- Keep product wall mounted and the base cleared of any wire or other external material:

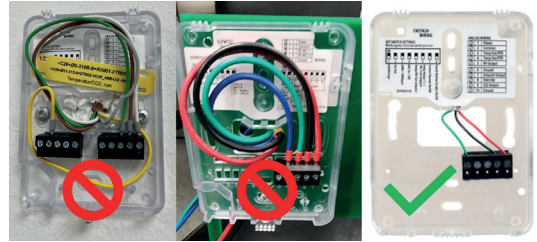

Failure to follow instructions can result in reduced accuracy, equipment damage or sensor fault.

Installation

1. Remove the cover from the base at the bottom of the device.



2. Position the sensor base vertically on the wall 1.35 m (4.5 ft.) above the floor with the "UP" arrow facing upward. Locate away from windows, vents and other sources of draft. If possible, do not mount on an external wall, as this may cause inaccurate temperature readings.




USA: +1 888-444-1311
Europe: +46 10 478 2000
Asia: +65 6484 7877
www.schneider-electric.com

Life Is On


Schneider
Electric

Installation (cont.)



3. Pull 18 or 22 AWG cable(s) through the hole in the back-plate.

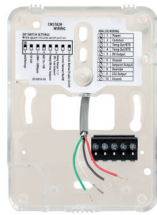

4. Mount the backplate onto the wall using the screws provided.

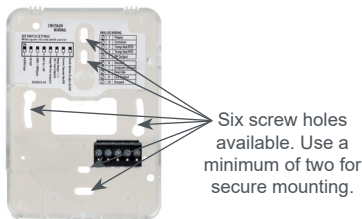

5. Connect the wires to the screw terminals. Do not over-tighten the screws.

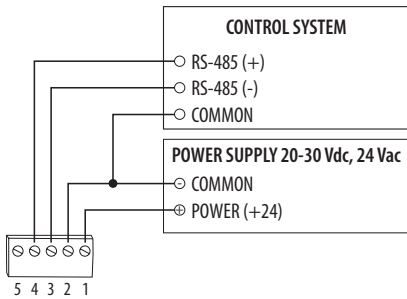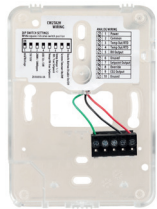


6. Configure the device.

Address Configuration:


Each device on a single network must have a unique address. Set the DIP switch labeled “ADDRESS” to assign a unique address before the device is connected to the network. If an address is selected that conflicts with another device, neither device will be able to communicate.

Address the device as any whole number between and including 1 to 127. Note that zero is not a valid address for Modbus; zero is a valid address for BACnet. Positions 1 through 7 of the “ADDRESS” DIP switch designate the address. Position 8 toggles between the Modbus and BACnet communication protocols, as shown in the diagram below. This is the left bank of DIP switches on the sensor.

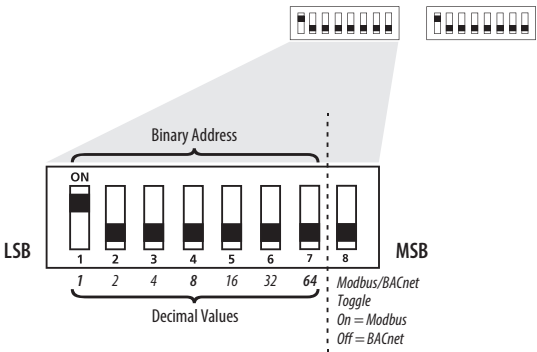

To set an address using the DIP switch, simply add the values of any switches that are in the ON position.

For example, an address of 73 is set as shown in the diagram below.

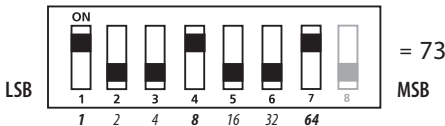


Position number 1 has an ON value of 1, position number 4 has an ON value of 8 and position number 7 has an ON value of 64 (1 + 8 + 64 = 73).

Installation (cont.)

Communications Configuration:

See the Product Diagram section for the location of the DIP switch labeled “CONFIG”. The following parameters are configurable:

- Parity (Modbus only): None, Odd, None1 (one stop bit), Even
- Baud rate: 9600, 19200, 38400, 57600 (Modbus), 76800 (BACnet)

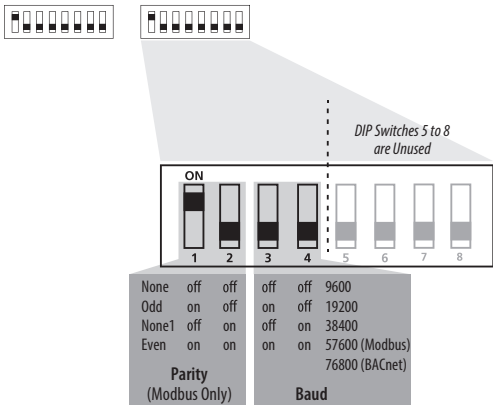

Example: No Parity, 19200 Baud

1	2	3	4	5	6	7	8
off	off	on	off	off	off	off	off
None		19200 Baud		Unused			

Modbus Point Map

Function Codes:

Function Code	Function
03	Read holding (RW) registers
04	Read input (RO) registers
06	Write single register*
16	Write multiple registers
01	Read coils
05	Write single coil
15	Write multiple coils

* Not supported.

All of these values correspond to BACnet objects with the same name. See the BACnet Conformance Statement for their definitions.

Note that an attempt to write to “read only” holding registers will give an error and the entire write command will not be executed even if writing to read/write locations were also requested. Exception code 2 is given in this case.

“Preserved” means the values is maintained through power outages.

32-Bit Input Registers (Read Only):

16-Bit Register Location	Description	Format
1	Temp reading	32-bit floating point
2		
3	Humidity reading	32-bit floating point
4		
5~8	Unused	NA
9	Model number	4x16-bit ASCII characters as a single query
10		
11		
12	Serial number	4x16-bit ASCII characters as a single query
13~41		
42		
43	Serial number	4x16-bit ASCII characters as a single query
44		
45		

32-Bit Holding Registers (Read/Write):

16-Bit Register Location	Description	Format
1	Temp setpoint	32-bit floating point
2		
3	Humidity setpoint	32-bit floating point
4		
5	Screen color set	32-bit
6		
7~39	Device name	4x16-bit ASCII characters as a single query
40	Fan speed	32-bit
41		

Note: All holding registers are preserved during power outages.

Coils (Read/Write):

Register	Description
3*	Touch button disable
5*	Temperature (°C)
6	Occupancy override
7*	Touch timeout
8*	Display shows humidity
12*	Display shows temperature setpoint on main screen

*Preserved during power outages.

Installation (cont.)

BACnet Descriptions

Note: In the tables below, all properties are read-only unless otherwise noted. “Preserved” means the value is maintained through power outages.

Present_Value Range Restrictions:

Object Name	Minimum Value	Maximum Value
DEV - Object_Name	1 Character	65 Characters
Temperature Setpoint	Min_Pres_Value	Max_Pres_Value
Min_Pres_Value	0	Max_Pres_Value -1
Max_Pres_Value	Min_Pres_Value +1	50
Humidity Setpoint	Min_Pres_Value	Max_Pres_Value
Min_Pres_Value	0	Max_Pres_Value -1
Max_Pres_Value	Min_Pres_Value +1	100
Screen Color	1	4
Fan Speed	1	5
Device_Instance	0	4,194,302

Standard Object Types Supported:

Object Type	Supported Optional Properties	Writable Properties
Analog Input - AI	Reliability	None
Analog Value - AV	Min_Pres_Value Max_Pres_Value	Min_Pres_Value Max_Pres_Value Present_Value
Binary Value - BV	None	Present Value
Multistate Value - MSV	None	Present Value
Device - DEV	Max Info Frames Max_Master	APDU_Timeout Max_Master Object_Name

Objects Table:

Object Name	Object Identifier	Object Property
Room Temperature	AI 1	Temperature in Room
Room Humidity	AI 2	Humidity in Room
Temperature Setpoint*	AV 1	Setpoint Value for Temperature
Humidity Setpoint*	AV2	Setpoint Value for Humidity
Touch Disable*	BV2	ACTIVE disables Touch Response INACTIVE enables Touch Response

Object Name	Object Identifier	Object Property
Temperature Units*	BV4	ACTIVE displays temperature in Fahrenheit INACTIVE displays temperature in Celsius
Occupancy Override	BV5	ACTIVE means room is not occupied INACTIVE means room is occupied
Screen Timeout*	BV 6	ACTIVE enables Screen Timeout INACTIVE disables Screen Timeout
Display Humidity*	BV7	ACTIVE displays humidity on Screen INACTIVE removes humidity from Screen
Select Temperature Display*	BV11	ACTIVE displays temperature setpoint on main screen INACTIVE displays temperature setpoint in upper left corner and current temperature on main screen
Screen Color Set*	MSV 1	Selection for Screen Color Theme
Fan Speed*	MSV 2	Fan Speed Selection

* Preserved during power outages.

Device Objects Table:

Object Name	Object Identifier	Object Property	Descrip.
Living Space Room Unit XXXXXXX	Vendor_ID + nnn	Object_Identifier (R/W)	Unique value where nnn initially is the MS/TP address

BACnet Protocol Implementation Conformance Statement

Vendor Name: Schneider Electric
Product Name: Living Space Room Unit
Product Model: SLPXXXX
BACnet Protocol Version : 1
BACnet Protocol Revision: 16
Product Description: Environmental Sensor
BACnet Standardized Device Profile (AnnexL):
BACnet Application Specific Controller (B-ASC)

Installation (cont.)

- List All BACnet Interoperability Building Blocks Supported(Annex K):
DS-RP-B, DS-RPM-B, DS-WP-B, DM-DDB-B, DM-DOB-B, DM-DCC-B, DM-RD-B
- Data Link Layer Options: MS/TP (Clause 9), baud rates, 9600, 19200, 38400, 76800
- Device Address Binding: Static Device binding is not supported.
- Networking Options: None
- Character Sets supported: ISO 10646 (UTF-8)
7. With sensor base fully installed, align top of cover to mounting tabs on top of sensor base. Swing cover downward until it latches at the bottom.




8. Install locking screw to secure cover in closed position.




Touchscreen Operation
Main Screen

The touchscreen user interface displays applicable sensor output values (temperature and RH), setpoint value and menu button.

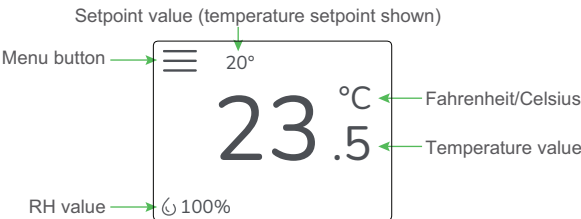

Room Temperature Display Option

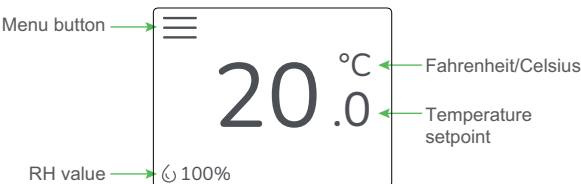

Temperature Setpoint Display Option


Menu Screen

The menu screen opens when pressing the Menu button on the main screen. Integrator's submenu, occupancy/override, Fahrenheit/Celsius, settings and setpoint submenu (temp, RH and fan) are displayed on the menu screen.



Note: RH setpoint will not appear on non-RH models.

Menu Button Functions

 **Integrator's Submenu**
Press this icon to access the Integrator's menu.

Submenu Only

Device

Model SLPSTX2

Serial Number 4E54FB0A

Firmware Revision LSA_APP_REV00800

page 1 of 3

Protocol

Sensor Address 1

Baud Rate 38400


page 2 of 3

Sensors


Temperature C 24.7


Humidity % 100

page 3 of 3


 **Occupied Override Button**
Press this icon to provide momentary signal output to the controller


Single Press Only


 Signals occupied/override call to controller.

 **Fahrenheit/Celsius Switch**
Press this icon to display either °C or °F.

Single Press Only

 Changes units to Fahrenheit when pressed.

 Changes units to Celsius when pressed.


 **Settings**
This icon provides the ability to change the color scheme of the display.

Submenu Only

Color palette selection screen with four color options: green, red, blue, and grey.

Four display screens showing temperature 23.5°C and humidity 100% with different color schemes: green, red, blue, and grey.

Four corresponding menu screens below the displays, each with a different color scheme and icons for integrator's submenu, occupied override, units switch, and settings.

 **Temp Setpoint Adjustment**
Click this icon to access the setpoint change menu.


Submenu Only

Temperature setpoint adjustment screen showing 85.0°F with minus and plus buttons.

 **Humidity Setpoint Adjustment**
Click this icon to access the setpoint change menu.

Submenu Only


Humidity setpoint adjustment screen showing 65% with minus and plus buttons.

 **Fan Speed**
Click this icon to access the fan speed menu.


Submenu Only

Fan speed selection screen with five fan speed icons. The first icon is highlighted with a green arrow and the word "Selected".

LCD Display Operation
Button Functions

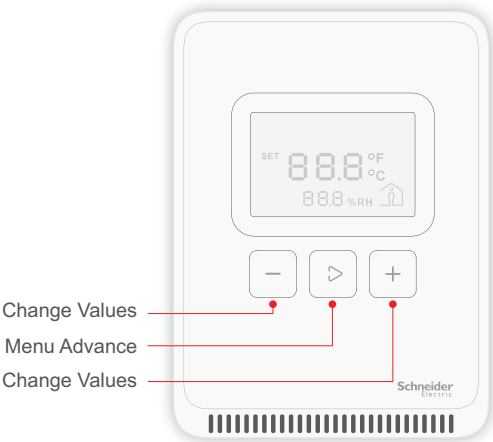


Display Icons
The main screen displays sensor values for RH (if equipped), room temperature or temperature setpoint and Celsius/Fahrenheit.

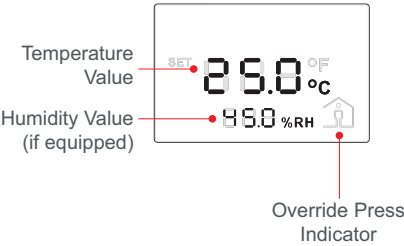


Setpoint Function
The Menu Advance button cycles between Temperature, RH (if equipped), Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

Temperature Setpoint Adjustment

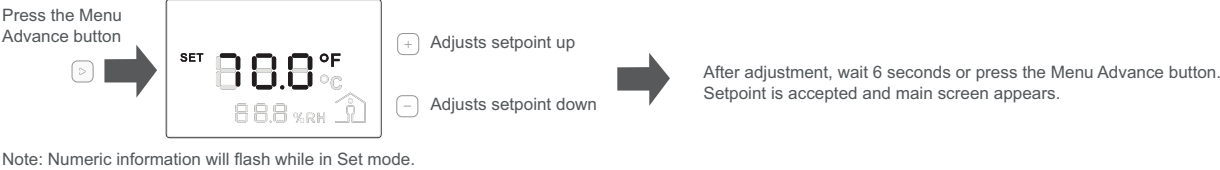


Note: Numeric information will flash while in Set mode.

RH Setpoint Adjustment

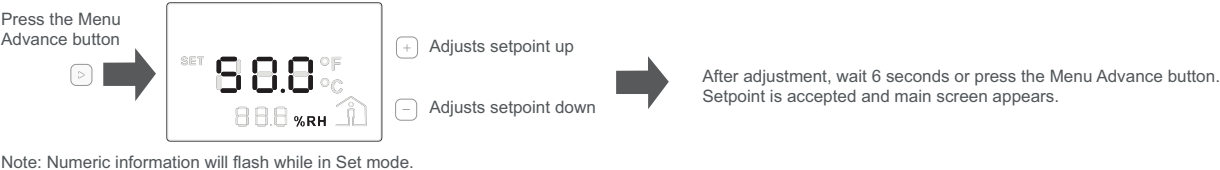

Note: Numeric information will flash while in Set mode.

Fan Speed Setpoint Adjustment

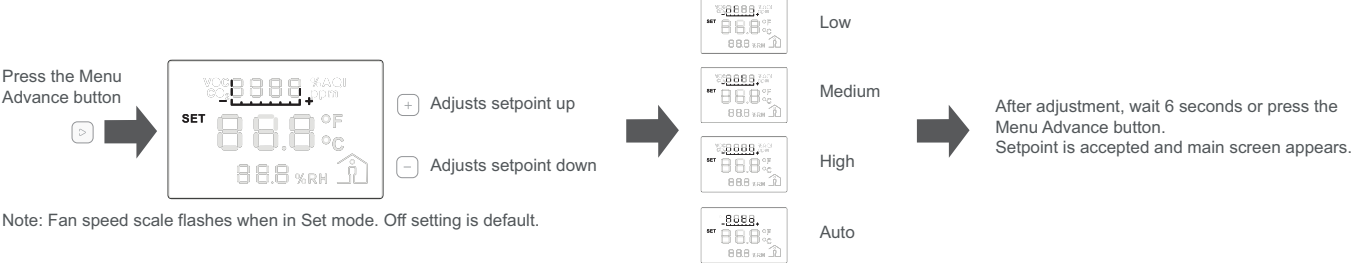

Note: Fan speed scale flashes when in Set mode. Off setting is default.


USA: +1 888-444-1311
Europe: +46 10 478 2000
Asia: +65 6484 7877
www.schneider-electric.com

Life Is On | **Schneider**
Electric

Setpoint Function (cont.)


Changing Celsius and Fahrenheit Scales

The Menu Advance button cycles between Temperature, RH (if equipped), Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

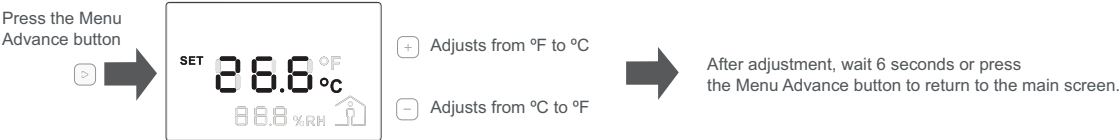

Note: °F or °C text will flash while in Set mode.

Occupied/Override Button

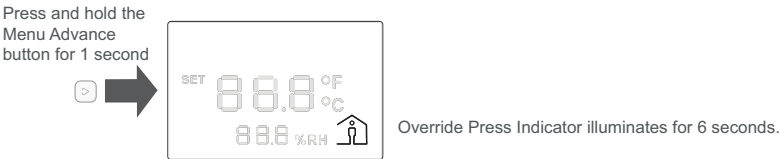

China RoHS Compliance Information
Environment-Friendly Use Period (EFUP) Table

部件名称		有害物质 - Hazardous Substances				
Part Name	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电子件 Electronic	X	O	O	O	O	O

本表格依据SJ/T11364的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572规定的限量要求。


(企业可在此处，根据实际情况对上表中打“X”的技术原因进行进一步说明。)

This table is made according to SJ/T 11364.

O: indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

X: indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572

Z000057-0B



USA: +1 888-444-1311
Europe: +46 10 478 2000
Asia: +65 6484 7877
www.schneider-electric.com

