



# CW2 Protocol Series

## Wall Mount Air Quality Sensors

### Product Overview

The CW2 Protocol Series of air quality sensors for living space is a flexible multi-sensor platform for use with BAS controllers designed to accept BACnet or Modbus outputs. CW2 Protocol Series sensors are available with three user interface options: touchscreen, LCD with three buttons and blank. CO<sub>2</sub> and temperature sensors are included with all CW2 Protocol Series air quality sensors. Models with VOC sensors and relative humidity sensors are also available.



**WARNING**

**HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH**

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors and covers before turning on power to this equipment.

**Failure to follow these instructions can result in death, serious injury or equipment damage.**

This product is intended for use in HVAC and building environmental control applications. It is not intended for direct medical monitoring of patients. It is not intended for life-safety applications. Read and understand these instructions before installing this product. The installer is responsible for all applicable codes. If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired. No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.

### Product Identification

<b>User Interface</b>	<b>Output</b>	<b>RH Accuracy*</b>	<b>VOC Sensor</b>
CW2 <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
T = Color touchscreen L = 3-button LCD display X = None	P = BACnet/Modbus	2 = 2% X = None	V = NDIR CO <sub>2</sub> /VOC = None

\* Replaceable RH module available to be ordered separately per table below.

#### Replaceable RH Elements

Model	Description	Temp. Calibration	RH Calibration
HS1N	Replaceable RH sensor, 1% with NIST certificate	N/A	2-point calibration
HS2N	Replaceable RH sensor, 2% with NIST certificate	N/A	2-point calibration
HS2X	Replaceable RH sensor, 2%	N/A	2-point calibration

### Specifications

OPERATING ENVIRONMENT	
<b>Input Power</b>	Class 2; 20 to 30 Vdc, 24 Vac, 50 to 60 Hz
<b>Protocol Output</b>	BACnet or Modbus via RS-485, selectable
<b>Operating Temp. Range</b>	0 to 50 °C (32 to 122 °F)
<b>Operating Humidity Range</b>	0 to 95% RH non-condensing
<b>Housing Material</b>	High-impact ABS plastic
<b>Terminal Block Torque</b>	0.5 to 0.6 N-m (0.37 to 0.44 in-lbf)
<b>IP Rating</b>	IP 30
<b>Mounting Location</b>	For indoor use only. Not suitable for wet locations.
<b>Surface Mount</b>	The device can be surface mounted on Single Gang J-Box, British Standard and CE60 wall boxes
CO <sub>2</sub> TRANSMITTER	
<b>Sensor Type</b>	Non-dispersive infrared (NDIR), diffusion sampling
<b>Output Range</b>	0 to 10,000 ppm
<b>Accuracy</b>	±30 ppm ±3% of measured value
<b>Resolution</b>	1 ppm
<b>Repeatability</b>	±20 ppm ±1% of measured value
<b>Response Time</b>	<60 seconds for 90% step change

Specifications (cont.)

<b>VOC TRANSMITTER OPTION</b>			
<b>Sensor Type</b>	Solid state		
<b>Display Range</b>	0 to 100% AQI for VOC		
<b>Accuracy</b>	±20% AQI		
<b>Resolution</b>	1 ppb		
<b>Output Scale</b>	0 to 5000 ppb of total VOC (TVOC)		
<b>AQI Table*</b>	<b>AQI % (Display)</b>	<b>TVOC Output (ppb)</b>	<b>Air Quality</b>
	100	>5319	Very Poor
	80 - 99	1596 - 5319	Poor
	60 - 79	532 - 1596	Moderate
	40 - 59	160 - 532	Good
	0 - 39	≤160	Very Good
<b>RH TRANSMITTER OPTION</b>			
<b>Sensor Type</b>	Solid state capacitive, replaceable		
<b>Output Range</b>	0 to 100% RH		
<b>Accuracy (Includes Hysteresis)**</b>	±3.8% RH from 10 to 60% RH @ 25°C (77 °F) ±4.8% RH from 60 to 80% RH @ 25°C (77 °F) ±5.8% RH from 80 to 100% RH @ 25°C (77 °F)		
<b>Resolution</b>	0.1% RH		
<b>Hysteresis</b>	1.5% typical		
<b>Stability</b>	±1% @ 20°C (68 °F) annually for 2 years		
<b>Temperature Coefficient</b>	±0.1% RH/°C above or below 25 °C (77 °F) typical		
<b>TEMPERATURE TRANSMITTER</b>			
<b>Sensor Type</b>	Solid state, integrated circuit		
<b>Output Range</b>	0 to 50 °C (32 to 122 °F)		
<b>Accuracy</b>	±0.2 °C (±0.4 °F) typical		
<b>Resolution</b>	0.1 °C (0.1 °F)		
<b>DISPLAY MODELS</b>			
<b>Touchscreen</b>	61 mm (2.4 in), color, backlit, capacitive, 240x300 px Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout		
<b>LCD</b>	52mm (2.05 in), segmented with 3 buttons Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout		
<b>SETPOINTS</b>			
<b>Temperature Setpoint</b>	Scale: 0 to 50 °C (32 to 122 °F) or 10 to 35 °C (50 to 95 °F) max., adjustable span		
<b>Humidity Setpoint</b>	Scale: 0 to 100% RH		
<b>Fan Speed Setpoint</b>	Off, Low, Medium, High, Auto		
<b>OVERRIDE</b>			
<b>Override Button</b>	Display models feature a momentary override button		
<b>WIRING TERMINALS</b>			
<b>Terminal Blocks</b>	Screw terminals, 18-24 AWG		
<b>Screw Terminal Torque</b>	0.2 N-m (2.0 in-lbF) max.		
<b>WARRANTY</b>			
<b>Limited Warranty</b>	5 years		


## Specifications (cont.)

COMPLIANCE INFORMATION	
<b>Agency Approvals</b>	UL 916 European Conformance CE: EN 60730-1, EN 60730-2-9, EN 60730-2-13, EN 61000-6-2, EN 61000-6-3, EN 61000 Series - Industrial Immunity, EN 61326-1 FCC Part 15 Class B, REACH, RoHS, ICES-003 (Canada), UKCA (UK)

\* Based on TVOC levels described by UBA.

\*\* Humidity sensor overall accuracy should include: accuracy, temperature coefficient and stability. Humidity accuracy is shown as an absolute value, so if testing accuracy with a hand-held device, you must check for deviation in its readings instead of calculating the percentual deviation. Additionally, you must consider the overall accuracy of the hand-held device in the comparison.

## Dimensions

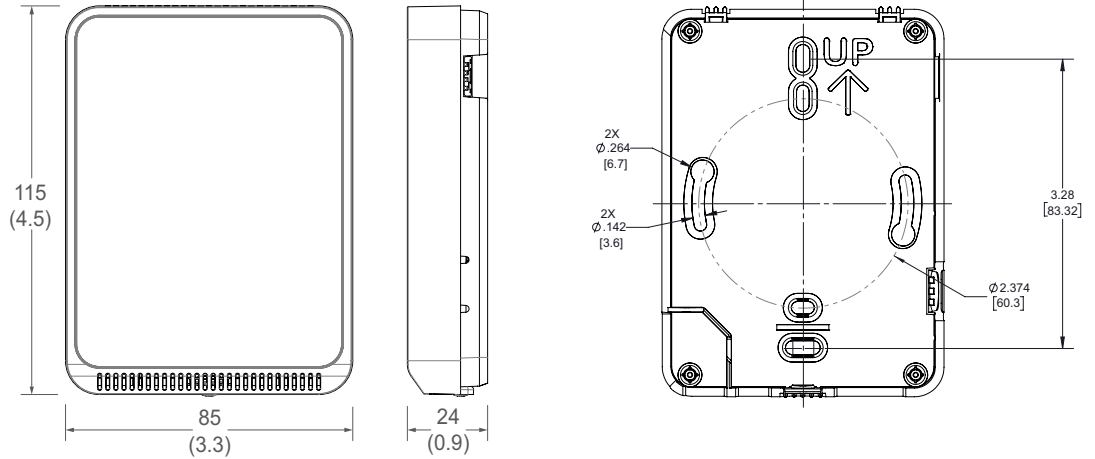

## Functions

The CW2 Protocol Series sensor measures CO<sub>2</sub>, VOC (if equipped), RH (if equipped) and temperature in a room and provides protocol outputs to a controller.

## Installation

NOTICE

**PRODUCT DAMAGE AND INACCURATE READINGS**

- Mount product vertically at a height that is between 3 to 5 feet (0.9 to 1.5 meters) above the floor [or 4 feet (1.2 meters) where the Americans with Disabilities Act needs to be followed]
- Mount product on a wall that is NOT exposed to the outside
- Install product far from windows, heat sources, door frames and at a minimum distance of 6 inches (15 centimeters) from any corner
- Drafts through conduits or other holes in the wall should be eliminated by plugging appropriate material into the cavity.
- This product is specified for environments with stable natural airflow. In dynamic airflow conditions, sensor performance may deviate from expected values. In stable elevated airflow, an offset feature can be applied. Refer to ZL0240-xx, CW2, HW2, TW2 and PMW Living Space Products Field Offset Adjustment Procedure for Temperature and Humidity Outputs on veris.com for further information.
- Keep product wall mounted base cleared from any wire or other external material:

**Failure to follow instructions can result in reduced accuracy, equipment damage or sensor fault.**

## Installation (cont.)

1. Remove the cover from the base at the bottom of the device.




2. Position the sensor base vertically on the wall 1.35 m (4.5 ft.) above the floor with the “UP” arrow facing upward. Locate away from windows, vents and other sources of draft. If possible, do not mount on an external wall, as this may cause inaccurate temperature readings.



3. Pull 18 or 22 AWG cable(s) through the hole in the backplate.




4. Mount the backplate onto the wall using the screws provided.

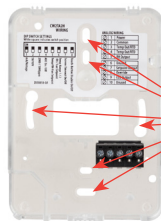


Six screw holes available. Use a minimum of two for secure mounting.

5. Connect the wires to the screw terminals. Do not over-tighten the screws.

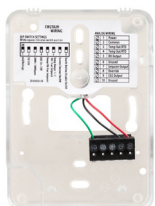

## Installation (cont.)

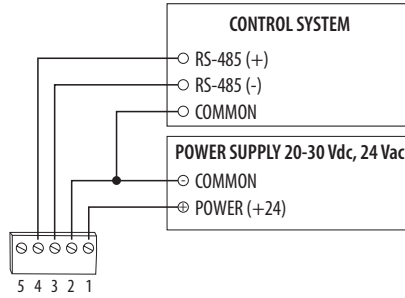


6. Configure the device.

**Address Configuration:**


Each device on a single network must have a unique address. Set the DIP switch labeled “ADDRESS” to assign a unique address before the device is connected to the network. If an address is selected that conflicts with another device, neither device will be able to communicate.

Address the device as any whole number between and including 1 to 127. Note that zero is not a valid address for Modbus; zero is a valid address for BACnet. Positions 1 through 7 of the “ADDRESS” DIP switch designate the address. Position 8 toggles between the Modbus and BACnet communication protocols, as shown in the diagram below. This is the left bank of DIP switches on the sensor.

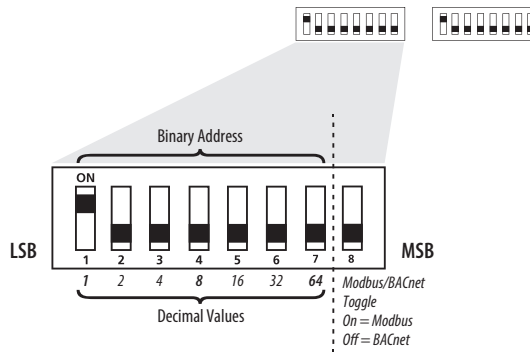

To set an address using the DIP switch, simply add the values of any switches that are in the ON position.

For example, an address of 73 is set as shown in the diagram below.

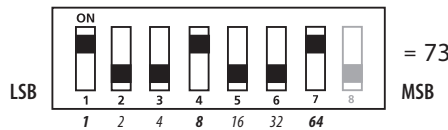


Position number 1 has an ON value of 1, position number 4 has an ON value of 8 and position number 7 has an ON value of 64 (1 + 8 + 64 = 73).

**Communications Configuration:**

The following parameters are configurable:

- Parity (Modbus only): None, Odd, None1 (one stop bit), Even
- Baud rate: 9600, 19200, 38400, 57600 (Modbus), 76800 (BACnet)

## Installation (cont.)

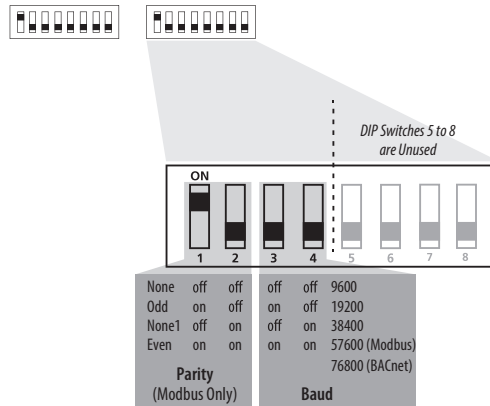

Example: No Parity, 19200 Baud

1	2	3	4	5	6	7	8
off	off	on	off	off	off	off	off
None		19200 Baud		Unused			

### Modbus Point Map

Function Codes:

Function Code	Function
03	Read holding (RW) registers
04	Read input (RO) registers
06	Write single register*
16	Write multiple registers
01	Read coils
05	Write single coil
15	Write multiple coils

\* Not supported.

All of these values correspond to BACnet objects with the same name. See the BACnet Conformance Statement for their definitions.

Note that an attempt to write to “read only” holding registers will give an error and the entire write command will not be executed even if writing to read/write locations were also requested. Exception code 2 is given in this case. “Preserved” means the values is maintained through power outages.

### 32-Bit Input Registers (Read Only):

16-Bit Register Location	Description	Format
1	Temperature reading	32-bit floating point
2		
3	Humidity reading	32-bit floating point
4		
5	CO2 reading	32-bit floating point
6		
7	VOC reading	32-bit floating point
8		
9	Model number	4x16-bit ASCII characters as a single query
10		
11		
12		
13~41	Unused	NA

## Installation (cont.)

42	Serial number	4x16-bit ASCII characters as a single query
43		
44		
45		
46 ~53	Unused	NA
54	Dew point reading	32-bit floating point
55		

### 32-Bit Holding Registers (Read/Write):

16-Bit Register Location	Description	Format
1	Temperature setpoint	32-bit floating point
2		
3	Humidity setpoint	32-bit floating point
4		
5	Screen color set	32-bit
6		
7~39	Device name	4x16-bit ASCII characters as a single query
40	Fan speed	32-bit
41		
42	CO2 yellow threshold	32-bit floating point
43	CO2 red threshold	32-bit floating point
44		
45	Unused	NA
46~51		
52		
53		
54		
55	Offset temp by this value	32-bit floating point
56	Offset humidity by this value	32-bit floating point
57		
58	Offset CO2 by this value	32-bit floating point
59		
59	Offset VOC by this value	32-bit floating point

*Note: All holding registers are preserved during power outages.*

### Coils (Read/Write):

Register	Description
2*	CO2 stoplight
3*	Touchbutton disable
4*	Invoke CO2 calibration
5*	Temperature (°C)
6	Occupancy override
7*	Touch timeout
8*	Display shows humidity
9*	Display shows CO2 level
10*	Display shows VOC level
11	Set 400ppm as CO2 baseline
12*	Display shows temperature setpoint on main screen
14*	Display shows setpoint

*\*Preserved during power outages.*

### BACnet Descriptions

Note: In the tables below, all properties are read-only unless otherwise noted. "Preserved" means the value is maintained through power outages.

## Installation (cont.)

Present\_Value Range Restrictions:

Object Name	Minimum Value	Maximum Value
DEV - Object_Name	1 Character	65 Characters
Temperature Setpoint Min_Pres_Value Max_Pres_Value	Min_Pres_Value 0 Min_Pres_Value +1	Max_Pres_Value Max_Pres_Value -1 50
Humidity Setpoint Min_Pres_Value Max_Pres_Value	Min_Pres_Value 0 Min_Pres_Value +1	Max_Pres_Value Max_Pres_Value -1 100
Screen Color	1	4
CO2 Yellow Limits	400	10000
CO2 Red Limits	400	10000
Fan Speed	1	5
Device_Instance	0	4,194,302
Temp Offset	-5	5
Humidity Offset	-10	10
CO2 Offset	-250	250
VOC Offset	-500	500

Standard Object Types Supported:

Object Type	Supported Optional Properties	Writable Properties
Analog Input - AI	Reliability	None
Analog Value - AV	Min_Pres_Value Max_Pres_Value	Min_Pres_Value Max_Pres_Value Present_Value
Binary Value - BV	None	Present Value
Multistate Value - MSV	None	Present Value
Device - DEV	Max Info Frames Max_Master	APDU_Timeout Max_Master Object_Name

Objects Table:

Object Name	Object Identifier	Object Property
Room Temperature	AI 1	Temperature in room
Room Humidity	AI 2	Humidity in room
CO2 Sensor	AI 3	CO <sub>2</sub> concentration
VOC Sensor	AI 4	VOC level
Dew Point	AI 9	Dew point temperature
Temperature Setpoint*	AV 1	Setpoint value for temperature
Humidity Setpoint*	AV2	Setpoint value for humidity
CO2 Yellow Limit*	AV3	CO <sub>2</sub> threshold at which the screen color changes from green to yellow
CO2 Red Limit*	AV4	CO <sub>2</sub> threshold at which the screen color changes from yellow to red
Temperature Offset*	AV7	Offset value to add to the temperature sensor output value
Humidity Offset*	AV8	Offset value to add to the humidity sensor output value
CO2 Offset*	AV9	Offset value to add to the CO <sub>2</sub> sensor output value

## Installation (cont.)

Object Name	Object Identifier	Object Property
VOC Offset*	AV10	Offset value to add to the VOC sensor output value
CO2 Stoplight*	BV1	ACTIVE enables CO <sub>2</sub> Stoplight INACTIVE disables CO <sub>2</sub> Stoplight
Touch Disable*	BV2	ACTIVE disables touch response INACTIVE enables touch response
CO2 ABC Cal*	BV3	ACTIVE enables ABC calibration INACTIVE disables ABC calibration
Temperature Units*	BV4	ACTIVE displays temperature in Fahrenheit INACTIVE displays temperature in Celsius
Occupancy Override	BV5	ACTIVE means room is not occupied INACTIVE means room is occupied
Screen Timeout*	BV6	ACTIVE enables screen timeout INACTIVE disables screen timeout
Display Humidity*	BV7	ACTIVE displays humidity on screen INACTIVE removes humidity from screen
Display CO2*	BV8	ACTIVE displays CO <sub>2</sub> level on screen INACTIVE removes CO <sub>2</sub> level from screen
Display VOC*	BV9	ACTIVE displays VOC level on screen INACTIVE removes VOC level from screen
CO2 FRC 400	BV10	ACTIVE sets 400 ppm as CO <sub>2</sub> baseline after Present_Value is read INACTIVE leaves CO2 baseline in last state (no action)
Select Temperature Display*	BV11	ACTIVE displays temperature setpoint on main screen INACTIVE displays temperature setpoint in upper left corner and current temperature on main screen
Display Setpoint*	BV13	ACTIVE enables temperature setpoint display on home screen INACTIVE disables temperature setpoint display on home screen
Screen Color Set*	MSV1	Selection for screen color theme
Fan Speed*	MSV2	Fan speed selection

\* Preserved during power outages.

Device Objects Table:

Object Name	Object Identifier	Object Property	Description
Living Space Room Unit XXXXXXX	Vendor_ID + nnn	Object _Identifier (R/W)	Unique value where nnn initially is the MS/TP address

### BACnet Protocol Implementation Conformance Statement

Vendor Name: Veris Industries

Product Name: Living Space Room Unit

Product Model: CW2XXXX

BACnet Protocol Version : 1

BACnet Protocol Revision: 16

Product Description: Environmental Sensor

BACnet Standardized Device Profile (AnnexL):

BACnet Application Specific Controller (B-ASC)

List All BACnet Interoperability Building Blocks Supported(Annex K):

DS-RP-B, DS-RPM-B, DS-WP-B, DM-DDB-B, DM-DOB-B, DM-DCC-B, DM-RD-B

Data Link Layer Options: MS/TP (Clause 9), baud rates, 9600, 19200, 38400, 76800

Device Address Binding: Static Device binding is not supported.

Networking Options: None

Character Sets supported: ISO 10646 (UTF-8)

## Installation (cont.)

7. With sensor base fully installed, align top of cover to mounting tabs on top of sensor base. Swing cover downward until it latches at the bottom.



8. Install locking screw to secure cover in closed position.




## CO<sub>2</sub> Sensor Calibration

There are two methods for CO<sub>2</sub> calibration available: 400 ppm baseline calibration and automatic baseline calibration (ABC).

### 400 ppm Baseline Calibration

400 ppm baseline calibration allows the sensor to be set at 400 ppm. Push and hold the calibration button for 3 to 5 seconds. The LED will flash green. Once the button is released, calibration is complete and the LED switches off.

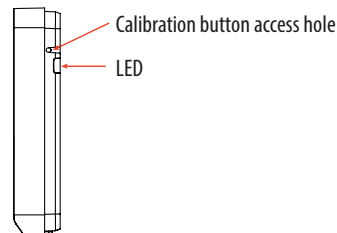


### Automatic Baseline Calibration (ABC)

The ABC mode addresses the 400 ppm calibration. It allows turning on or off a background correction/recovery mode that will minimize any calibration error that has been caused by shock during handling and transportation or is caused by a long term shift in measurement. The ABC algorithm constantly keeps track of the sensor's lowest reading over a preconfigured time interval and slowly corrects for any long-term drift detected as compared to the expected fresh air value of 400 ppm. After initial startup, it is expected that the sensor reaches specified accuracy after 7 to 21 days.

## Touchscreen Operation

### Main Screen

The touchscreen user interface displays applicable sensor output values (temperature, RH, CO2 and VOC), setpoint value, menu button and CO2 stoplight status (if enabled).

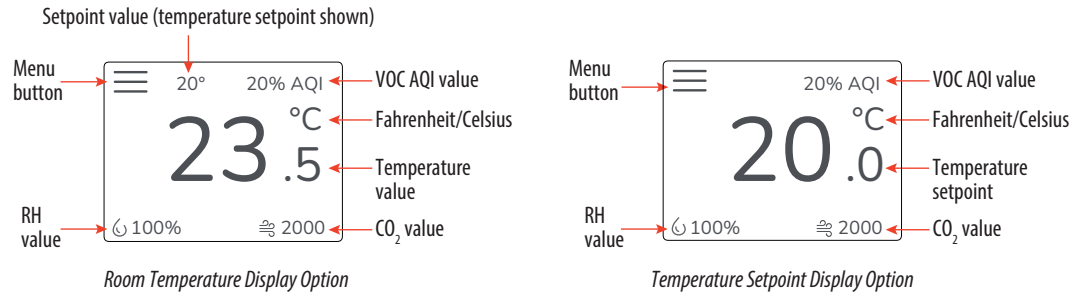

### Menu Screen

The menu screen opens when pressing the Menu button on the main screen. Integrator's submenu, occupancy/override, Fahrenheit/Celsius, settings, setpoint submenu (temp, RH and fan) and CO2 stoplight buttons are displayed on the menu screen.




Note: RH setpoint will not appear on non-RH models.

### Menu Button Functions

**Integrator's Submenu**  
Press this icon to access the Integrator's menu.

#### Submenu Only



**Occupied Override Button**  
Press this icon to provide momentary signal output to the controller

**Single Press Only**  
Signals occupied/override call to controller.

**Fahrenheit/Celsius Switch**  
Press this icon to display either °C or °F.

**Single Press Only**  
Changes units to Fahrenheit when pressed.  
Changes units to Celsius when pressed.





## Touchscreen Operation (cont.)



**Settings**  
This icon provides the ability to change the color scheme of the display.

Submenu Only

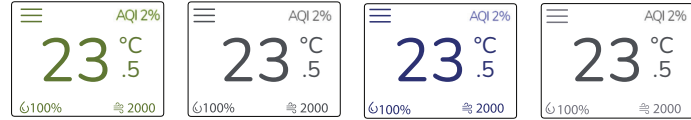


**Temp Setpoint Adjustment**  
Click this icon to access the setpoint change menu.  
Toggle the Temp Setpoint Display button to display or hide the setpoint value on the home screen.

Submenu Only



Temp Setpoint Display Button On

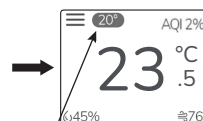

Setpoint




Temp Setpoint Display Button Off



**Humidity Setpoint Adjustment**  
Click this icon to access the setpoint change menu.

Submenu Only

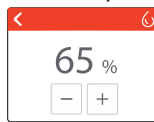

**Fan Speed**  
Click this icon to access the fan speed menu.

Submenu Only




Selected




**CO2 Stoplight Menu**  
Click this icon to toggle the CO2 Stoplight feature on and off. With CO2 Stoplight turned on, the background color of the main screen changes with CO2 level. This provides a visual indicator of CO2 levels to the room occupants.

Using the +/- buttons, the thresholds at which the colors change on the main screen are user configurable, as described in the diagram.

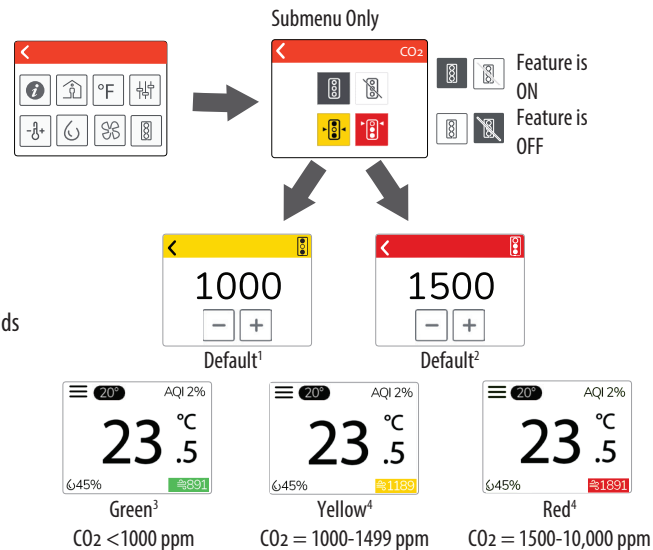

1. Values <400 ppm will be rounded up to the minimum limit of 400 ppm.
2. Values >10,000 ppm will be rounded down to the maximum limit of 10,000 ppm.
3. Possible to adjust CO2 thresholds by changing the yellow and red limits.
4. User configurable in increments of 10 ppm using the +/- buttons. With a long press of these buttons, the number will change more quickly.


## LCD Display Operation *Button Functions*

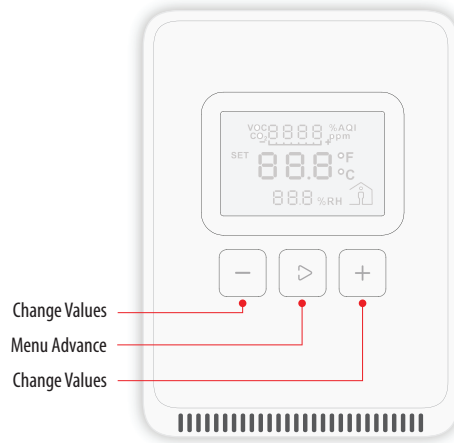

## Setpoint Function

### Display Icons


The main screen displays sensor values for CO<sub>2</sub>, VOC (if equipped), RH (if equipped), room temperature or temperature setpoint and Celsius/Fahrenheit.

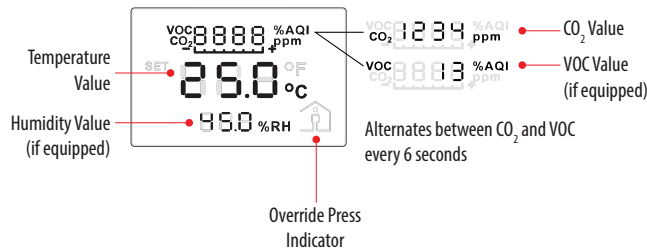

The Menu Advance button cycles between Temperature, RH (if equipped), Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

### Temperature Setpoint Adjustment

Press the Menu Advance button

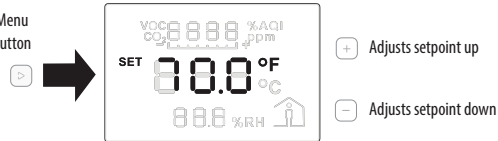


After adjustment, wait 6 seconds or press the Menu Advance button. Setpoint is accepted and main screen appears.

Note: Numeric information will flash while in Set mode.

### RH Setpoint Adjustment

Press the Menu Advance button

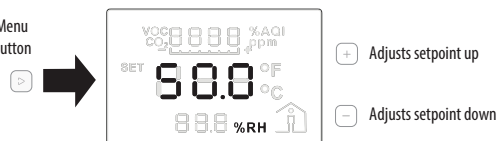


After adjustment, wait 6 seconds or press the Menu Advance button. Setpoint is accepted and main screen appears.

Note: Numeric information will flash while in Set mode.


## Setpoint Function (cont.)

### Fan Speed Setpoint Adjustment

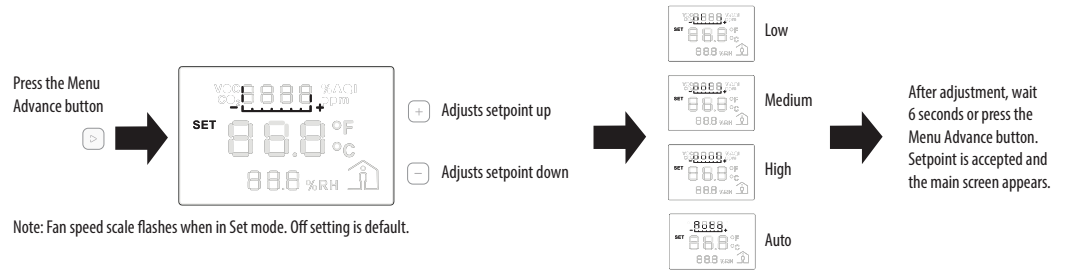


### Changing Celsius and Fahrenheit Scales

The Menu Advance button cycles between Temperature, RH (if equipped), Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

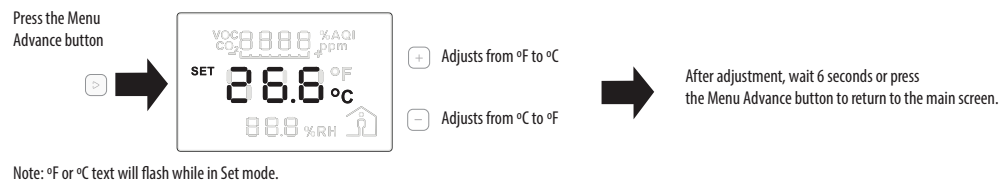

### Occupied/Override Button

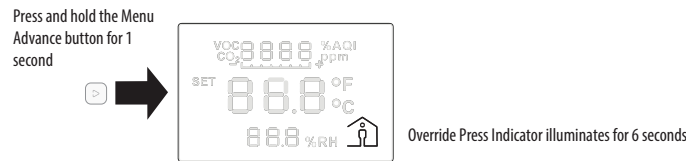

## China RoHS Compliance Information

### Environment-Friendly Use Period (EFUP) Table

部件名称	有害物质 - Hazardous Substances					
Part Name	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电子件 Electronic	X	O	O	O	O	O

本表格依据SJ/T11364的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

(企业可在此处，根据实际情况对上表中打“X”的技术原因进行进一步说明。)

This table is made according to SJ/T 11364.

O: indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

X: indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572

Z000057-0B