

SINGLE PHASE WIRING FOR ASCO 7000 SERIES AUTOMATIC TRANSFER SWITCHES TYPE J7ATS RATED 260, 400, & 600 AMPERES

FEATURES, SETTINGS, OPERATION, ACCESSORIES & NOTES

THE FOLLOWING FEATURES AND RELATED SETTINGS ARE PART OF THE GROUP 5 CONTROL PANEL'S USER CONFIGURABLE PARAMETERS. FOR DETAILED INFORMATION REGARDING THE CONFIGURATION OF THESE PARAMETERS AND OTHER FEATURES OF THE GROUP 5 CONTROL PANEL, REFER TO THE GROUP 5 CONTROL PANEL FOR ASCO 7000 SERIES AUTOMATIC TRANSFER SWITCHES USER'S GUIDE (PART NO. 381333-126) PROVIDED WITH EVERY 7000 SERIES AUTOMATIC TRANSFER SWITCH.

THE NOMINAL OPERATING VOLTAGE & FREQUENCY IS PRE-PROGRAMMED AT THE FACTORY BASED ON THE NAMEPLATE DATA PRINTED ON THE TRANSFER SWITCH & CONTROL PANEL NAMEPLATES.

VOLTAGE & FREQUENCY SENSING

THE FOLLOWING SETTINGS ARE EXPRESSED AS A PERCENTAGE OF THE CONTROL PANEL'S NOMINAL VOLTAGE SETTING UNLESS STATED OTHERWISE. ALL SETTINGS ARE ADJUSTABLE IN INCREMENTS OF 1%.

A. RMS VOLTAGE SENSING ON ALL PHASES OF THE NORMAL & EMERGENCY SOURCES.

PARAMETER	RANGE OF SETTINGS	DEFAULT SETTING
NORMAL VOLTAGE DROPOUT	70-98%	85%
NORMAL VOLTAGE PICKUP	85-100%	90%
NORMAL OVER VOLTAGE TRIP	102-115%	OFF
NORMAL VOLTAGE UNBALANCE	YES/NO	NO
NORMAL VOLTAGE UNBALANCE DROPOUT	5-20% OF AVG. NORMAL VOLTAGE	20% (if ON)
NORMAL VOLTAGE UNBALANCE PICKUP	3-18% OF AVG. NORMAL VOLTAGE	10% (if ON)
EMERGENCY VOLTAGE DROPOUT	70-98%	75%
EMERGENCY VOLTAGE PICKUP	85-100%	90%
EMERGENCY OVER VOLTAGE TRIP	102-115%	OFF
EMERGENCY VOLTAGE UNBALANCE	YES/NO	NO
EMERGENCY VOLTAGE UNBALANCE DROPOUT	5-20% OF AVG. EMERGENCY VOLTAGE	20% (if ON)
EMERGENCY VOLTAGE UNBALANCE PICKUP	3-18% OF AVG. EMERGENCY VOLTAGE	10% (if ON)

B. FREQUENCY SENSING OF THE NORMAL & EMERGENCY SOURCES.

PARAMETER	RANGE OF SETTINGS	DEFAULT SETTING
NORMAL FREQUENCY DROPOUT	85-98%	90%
NORMAL FREQUENCY PICKUP	90-100%	95%
NORMAL OVER FREQUENCY TRIP	102-110%	OFF
EMERGENCY FREQUENCY DROPOUT	85-98%	90%
EMERGENCY FREQUENCY PICKUP	90-100%	95%
EMERGENCY OVER FREQUENCY TRIP	102-110%	OFF

TIME DELAYS

THE FOLLOWING TIME DELAY SETTINGS ALL HAVE AN ADJUSTABLE RANGE OF 0-60 min 59 sec UNLESS STATED OTHERWISE. ADJUSTABLE IN INCREMENTS OF 1 sec.

NOTE: SOME TIME DELAYS MAY BE EFFECTED BY CUSTOMER REQUESTED ACCESSORIES PROVIDED WITH THE UNIT. REFER TO THE DESCRIPTIONS PROVIDED UNDER THE "ACCESSORIES" NOTES ON THIS PAGE.

FEATURE	NAME	DEFAULT SETTING
1C	NORMAL SOURCE FAILURE TO ENGINE START	1 sec
2B	TRANSFER TO EMERGENCY ON AVAILABILITY OF EMERGENCY SOURCE	0 sec
1F	EMERGENCY SOURCE FAILURE RETRANSFER (NORMAL SOURCE AVAILABLE)	0 sec
2E	ENGINE COOLDOWN FOLLOWING RETRANSFER TO NORMAL	5 min
3A	RETRANSFER TO NORMAL (NORMAL FAILURE MODE)	30 min
3A	RETRANSFER TO NORMAL (TEST MODE)	30 sec
-	DELAYED TRANSFER (LOAD "OFF" TIME), [0-5 min 59 sec]	3 sec

DESCRIPTIONS OF TIME DELAYS:

- FEAT. 1C** - DELAY ON NORMAL SOURCE OUTAGE. STARTS ON FAILURE OF NORMAL SOURCE. RESETS IF NORMAL SOURCE IS ACCEPTED BEFORE EXPIRATION. INHIBITS ENGINE STARTING AND AUTOMATIC TRANSFER UNTIL EXPIRATION.
- FEAT. 2B** - DELAY PRIOR TO TRANSFER TO THE EMERGENCY SOURCE. DELAY STARTS ON EXPIRATION OF FEAT. 1C AND WHEN THE EMERGENCY SOURCE HAS BEEN ACCEPTED. DELAY RESETS IF THE EMERGENCY SOURCE FAILS PRIOR TO EXPIRATION. ON EXPIRATION, TRANSFER TO EMERGENCY IS INITIATED UNLESS THE NORMAL SOURCE HAS RECOVERED AND THE "COMMIT TO TRANSFER" FEATURE IS SET TO "NO" COMMIT. PROVIDES A PERIOD FOR EMERGENCY SOURCE STABILIZATION OR STAGING OF MULTIPLE TRANSFER SWITCH CONTROLLED LOADS TO THE EMERGENCY SOURCE.
- FEAT. 1F** - DELAY ON RETRANSFER TO NORMAL IN THE EVENT OF EMERGENCY SOURCE FAILURE. DELAY BEGINS ON FAILURE OF THE EMERGENCY SOURCE IF THE NORMAL SOURCE IS ACCEPTABLE. ON EXPIRATION, RETRANSFER TO NORMAL WILL BE INITIATED.
- FEAT. 2E** - DELAY ON ENGINE SHUTDOWN (ENGINE COOL DOWN PERIOD). DELAY STARTS FOLLOWING RETRANSFER TO THE NORMAL SOURCE. PROVIDES A PERIOD FOR THE ENGINE-GENERATOR SET TO RUN UNLOADED PRIOR TO SHUTDOWN.
- FEAT. 3A** - RETRANSFER TO NORMAL DELAY (NORMAL FAILURE MODE) DELAY STARTS WHEN NORMAL SOURCE IS ACCEPTED (FOLLOWING IT'S FAILURE) AND WHILE THE LOAD IS CONNECTED TO EMERGENCY. RESETS IF NORMAL FAILS PRIOR TO EXPIRATION OR IF THE EMERGENCY SOURCE FAILS BEFORE EXPIRATION AND FEAT. 1F EXPIRES (AUTOMATIC BYPASS ON EMERGENCY SOURCE FAILURE). PROVIDES A PERIOD FOR THE NORMAL SOURCE TO STABILIZE PRIOR TO RETRANSFER.
- FEAT. 3A** - RETRANSFER TO NORMAL DELAY (TEST MODE) DELAY STARTS WHEN THE "TRANSFER TEST" SWITCH IS RESET TO "AUTO" (FOLLOWING A USER INITIATED TRANSFER TEST) AND WHILE THE LOAD IS CONNECTED TO EMERGENCY. RESETS IF NORMAL FAILS PRIOR TO EXPIRATION OR IF THE EMERGENCY SOURCE FAILS BEFORE EXPIRATION AND FEAT. 1F EXPIRES (AUTOMATIC BYPASS ON EMERGENCY SOURCE FAILURE).

MOTOR LOAD TRANSFER FEATURE

- FEAT. 27** - INPHASE TRANSFER CONTROL LOGIC TO INITIATE AN INPHASE TRANSFER OF LOADS BETWEEN LIVE SOURCES. USED TO PREVENT NUISANCE TRIPPING OF CIRCUIT BREAKERS AND POSSIBLE DAMAGE TO MECHANICAL LOADS CAUSED BY OUT OF PHASE TRANSFER.
- ACTIVATED VIA THE GROUP 5 CONTROL PANEL USER INTERFACE (TRANSFER CONTROL CENTER) BY SELECTING "IN-PHASE MONITOR ENABLE" = YES. AN ADJUSTABLE DELAY (0.0-3.0 sec, FACTORY SET TO 1.5 sec, IN INCREMENTS OF 0.1 sec) DELAYS SENSING TO PERMIT STABILIZATION OF THE SOURCES PRIOR TO SENSING. FACTORY SETTING IS DISABLED UNLESS SPECIFIED TO BE FACTORY ACTIVATED AT THE TIME OF ORDER.

ENGINE EXERCISER

THE ENGINE EXERCISER FEATURE PROVIDES A MEANS TO PERFORM AUTOMATIC EXERCISING OF THE ENGINE-GENERATOR SET EITHER WITH OR WITHOUT LOAD TRANSFER. THE USER CAN PROGRAM UP TO SEVEN DIFFERENT EXERCISE ROUTINES. EACH ROUTINE INCLUDES:

1. ENABLE OR DISABLE THE ROUTINE
2. ENABLE OR DISABLE TRANSFER OF THE LOAD DURING THE ROUTINE
3. SET START TIME OF ROUTINE -
 - TIME OF DAY
 - DAY OF WEEK
 - WEEK OF MONTH (1st, 2nd, 3rd, 4th, ALTERNATE OR ALL)
4. SET THE DURATION OF THE ROUTINE

PARAMETER	RANGE OF SETTING	DEFAULT SETTING
MONTH (CLOCK SET)	JAN FEB MAR APR MAY JUN JUL AUG SEP OCT NOV DEC	CURRENT DATE
DAY	1-31	1-31
YEAR	00-99	00-99
HOUR	0-23	0-23
MINUTE	0-59	0-59
ENABLE ROUTINE (ROUTINE 1-7)	YES/NO	NO
TRANSFER LOAD	YES/NO	NO
START HOUR	0-23	0
START MINUTE	0-59	0
RUN WEEK	ALL, ALTERNATE, 1st, 2nd, 3rd, 4th, 5th	ALL
RUN DAY	SUN MON TUE WED THU FRI SAT	SUN
DURATION HOURS	0-23	0
DURATION MINUTES	0-59	0

SIGNALS & AUXILIARIES

- A. FEATURES 7 & 8** - ENGINE START SIGNAL SIGNAL INITIATED BY DROPOUT OF CONTROL PANEL RELAY (NR) FOLLOWING EXPIRATION OF THE FEATURE 1C TIME DELAY (DELAY TO OVERRIDE MOMENTARY NORMAL SOURCE OUTAGES). FEATURE 7 CLOSING TO SIGNAL ENGINE START. FEATURE 8 OPENS TO SIGNAL ENGINE START. ENGINE STARTING SIGNAL RESETS FOLLOWING RETRANSFER TO THE NORMAL SOURCE AND EXPIRATION OF THE FEATURE 2E (ENGINE COOL DOWN) TIME DELAY. FEATURES 7 & 8 ARE PROVIDED AS A SINGLE FORM C CONTACT CONNECTED TO THE FIELD CONNECTIONS TERMINAL BLOCK (TB). CONTACT RATED 5 AMPS AT 32 VDC/120VAC RESISTIVE.

- B. FEATURES 14AG & 14BG** - TRANSFER SWITCH AUXILIARY POSITION INDICATING CONTACTS. EIGHT (8) FORM C CONTACTS TO INDICATE CONNECTION OF THE TRANSFER SWITCH TO NORMAL (14A) OR EMERGENCY (14B). CONTACTS CONNECTED TO THE FIELD CONNECTIONS TERMINAL BLOCK (TB). CONTACTS RATED 10 AMPS, 32 VDC, 250 VAC.

- C. FEATURE 17** - REMOTE TRANSFER TO EMERGENCY. REQUIRES A CUSTOMER SUPPLIED NORMALLY OPEN CONTACT. CLOSING OF THE CONTACT CAUSES ENGINE START AND TRANSFER TO THE EMERGENCY SOURCE. OPENING OF THE CONTACT ACTIVATES THE FEATURE 3A (RETRANSFER TO NORMAL) DELAY PRIOR TO RETRANSFER. IN THE EVENT THE EMERGENCY SOURCE FAILS WHILE THE TRANSFER SWITCH IS CONNECTED TO EMERGENCY AND THE REMOTE CONTACT IS CLOSED, THE TRANSFER SWITCH WILL RETRANSFER TO THE NORMAL SOURCE. CONNECTED TO THE FIELD CONNECTIONS TERMINAL BLOCK (TB).

OPERATION

IF THE NORMAL SOURCE FAILS, THE TRANSFER SWITCH INITIATES STARTING OF THE ENGINE-GENERATOR SET. WHEN PROPER VOLTAGE AND FREQUENCY HAVE BEEN ATTAINED, THE LOAD WILL BE TRANSFERRED TO THE EMERGENCY SOURCE.

WHEN THE NORMAL SOURCE IS RESTORED FOR THE DURATION OF THE FEATURE 3A (RETRANSFER TO NORMAL) TIME DELAY SETTING, THE LOAD WILL BE RETRANSFERRED TO THE NORMAL SOURCE.

THE ENGINE WILL CONTINUE TO RUN FOR THE ENGINE COOL DOWN PERIOD, FEATURE 2E.

USER CONTROLS AND INDICATIONS

- A. FEATURES 5 & 6B** - TRANSFER TEST/RETRANSFER TIME DELAY BYPASS CONTROLS.

TRANSFER TEST: OPERATION CAUSES A NORMAL SOURCE FAILURE SEQUENCE. ACTIVATE AND HOLD FOR AT LEAST 15 SECONDS TO ALLOW TIME FOR THE ENGINE-GENERATOR TO START.

RETRANSFER TIME DELAY BYPASS: OPERATION WILL BYPASS THE FEATURE 3A (RETRANSFER TO NORMAL DELAY).

- B. FEATURES 9A & 9B** - TRANSFER SWITCH POSITION INDICATORS.
 FEATURE 9A: TRANSFER SWITCH CLOSED ON NORMAL (GREEN LED)
 FEATURE 9B: TRANSFER SWITCH CLOSED ON EMERGENCY (RED LED)

- C. FEATURES 9C & 9D** - SOURCE ACCEPTANCE INDICATORS.
 FEATURE 9C: NORMAL SOURCE ACCEPTED (GREEN LED)
 FEATURE 9D: EMERGENCY SOURCE ACCEPTED (RED LED)

GENERAL NOTES

1. SWITCH SHOWN DE-ENERGIZED AND CONNECTED TO THE NORMAL SOURCE.
2. DEVICE SYMBOLS AND DESIGNATIONS ARE IN ACCORDANCE WITH NEMA PUBLICATION ICS 1-1983, PART 1-101A.
3. ALL WIRING IS #16 AWG, TINNED, STRANDED COPPER UNLESS OTHERWISE INDICATED.
4. ○ ON TERMINAL BLOCKS INDICATES AVAILABLE FIELD CONNECTION POINT.
5. ● ON TERMINAL BLOCKS INDICATES FACTORY CONNECTION POINT.
6. CONTROL AND ACCESSORY WIRING IS Routed IN ACCORDANCE WITH ASCO ASSEMBLY PROCEDURE GS451261.
7. AN OPERATOR'S MANUAL IS FURNISHED WITH EACH AUTOMATIC TRANSFER SWITCH. REFER TO THIS PUBLICATION PRIOR TO INSTALLATION AND OPERATION OF THE UNIT.

BASE CATALOG NUMBER				CATALOG NUMBER SUFFIXES				EXPLANATION OF CATALOG NUMBER CODES								
TS FRAME	CATALOG TYPE	NEUTRAL TYPE	PHASE POLES	AMPS	VOLT CODE	CONTROLLER	OPTIONAL ACCESSORY	ENCLOSURE CODE	NEUTRAL TYPE		VOLTAGE CODES 1 PHASE (2 OR 3 WIRE) 50 OR 60 Hz		ENCLOSURE CODES			
									CODE	DESCRIPTION	CODE	NOMINAL VOLTAGE	CODE	TYPE	DESCRIPTION	
					C D E F				BLANK	NONE			BLANK	C	1	OPEN TYPE (NO ENCLOSURE)
					G H J K L M N P Q R				A	SOLID			E	2	GENERAL PURPOSE, INDOOR	
									B	SWITCHING			F	3R	INDOOR, WATER & DUST RESISTANT	
									C	OVERLAPPING			G	4	INDOOR, RAINPROOF, SLEET & ICE RESISTANT	
													H	4X	INDOOR/OUTDOOR, WATERTIGHT & DUSTTIGHT	
													J	4X	INDOOR/OUTDOOR, WATERTIGHT & DUSTTIGHT	
													K	7	TYPE 4 PLUS CORROSION RESISTANCE (STAINLESS STEEL)	
													L	12	TYPE 4 PLUS CORROSION RESISTANCE (FIBERGLASS)	
															EXPLOSION PROOF	
															INDOOR, INDUSTRIAL ENVIRONMENTS, OILTIGHT & DUSTTIGHT	
															(SECURE ENCLOSURES)	
													M	3R	INDOOR, RAINPROOF, SLEET & ICE RESISTANT	
													N	4	INDOOR/OUTDOOR, WATERTIGHT & DUSTTIGHT	
													P	4X	INDOOR, RAINPROOF, SLEET & ICE RESISTANT	
													Q	12	INDOOR, RAINPROOF, SLEET & ICE RESISTANT	
													R		INDOOR, INDUSTRIAL ENVIRONMENTS, OILTIGHT & DUSTTIGHT	

CATALOG NUMBER _____
 CERTIFIED TO _____

ASCO® S.O. _____

BY _____
 DATE _____

FORM REV - _____

PROJECT NAME: _____


WIRING DIAGRAM
7000 SERIES (J7ATS)
GROUP 5 CONTROLS

DRAWN BY: BWM 7/05
 CHECKED: _____
 DRAFTING APPROVAL: _____
 FINAL APPROVAL: JPB 7/05

205112	BWM	JPB	7/05
ISSUE			
CHANGE LETTER	ECN NO.	BY	DATE
AE	AN	AM	AL
CH	AV	AA	PS
AC	AP	AC	AS
SUBSIDIARY DISTRIBUTION			
COMPUTER GENERATED DRAWING			
SCALE	1:1	ACAD	FILE
SIZE	DWG. NO.	DS 775442	
CHANGE LETTER	ECN NO.	205112	SHEET 1 OF 6

ASCO® ASCO POWER TECHNOLOGIES, L.P.
 FLORHAM PARK, NEW JERSEY 07932 U.S.A.


FIELD CONNECTIONS

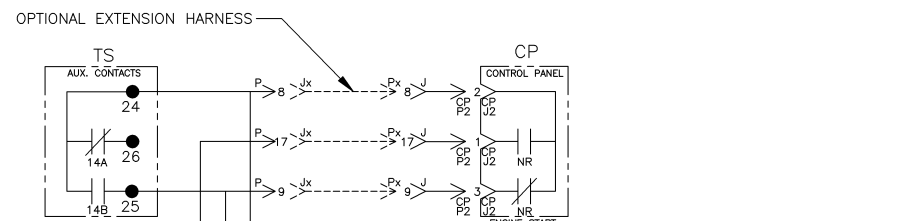


TB (FIELD CONNECTIONS), WIRE RANGE: 22-12 AWG

COMMON
FEATURE 7 CLOSURES TO START
FEATURE 8 OPENS TO START

ENGINE STARTING SIGNALS (5 AMPS, 32VDC)

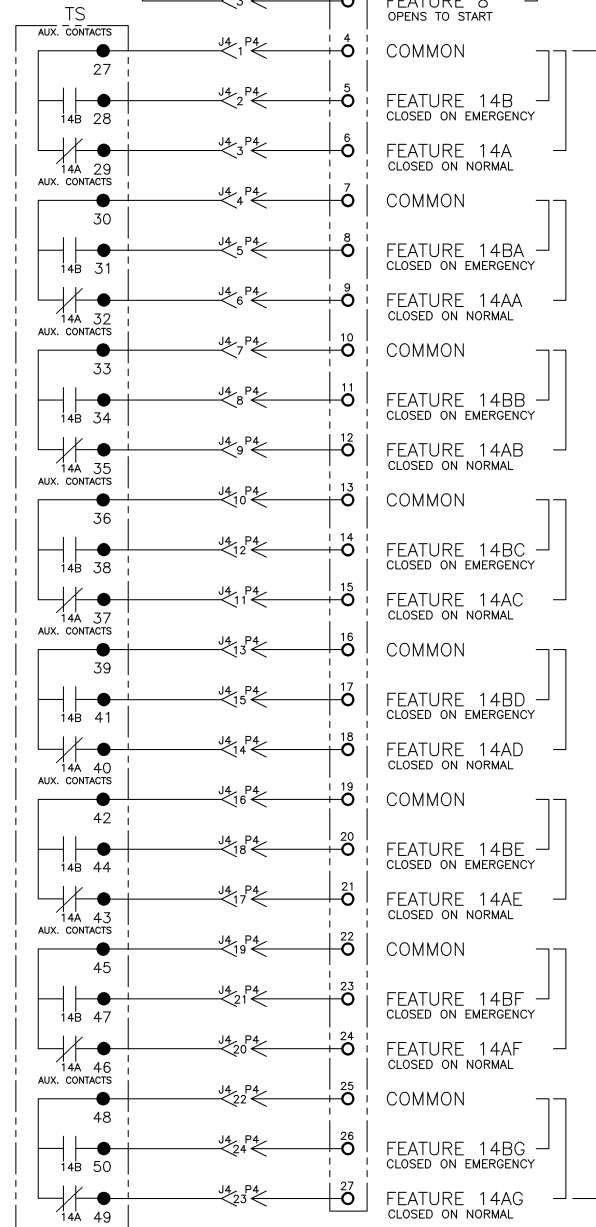


TS AUXILIARY CONTACTS (10 AMPS, 32VDC) (10 AMPS, 250VAC) GENERAL PURPOSE

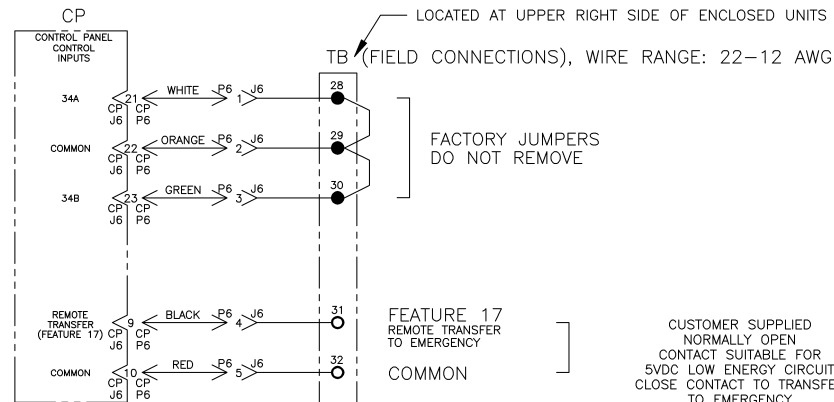

TB (FIELD CONNECTIONS), WIRE RANGE: 22-12 AWG

COMMON
FEATURE 17 REMOTE TRANSFER TO EMERGENCY

CUSTOMER SUPPLIED NORMALLY OPEN CONTACT SUITABLE FOR 5VDC LOW ENERGY CIRCUIT CLOSE CONTACT TO TRANSFER TO EMERGENCY

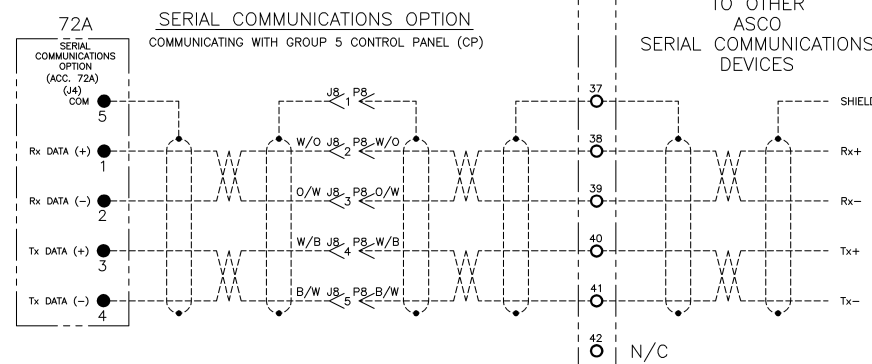


72A NOTES:

- EARTH GROUND SHIELD AT HOST DEVICE ONLY.
- FIELD WIRING: USE UL LISTED, STRANDED, TWISTED PAIRS, OVERALL FOIL SHIELD WITH STRANDED DRAIN WIRE SUITABLE FOR RS-422 EQUIVALENT TO: (STANDARD 80°C) BELDEN 9842 OR 9829 OR ALPHA 6202C OR 6222C (PLENUM RATED) BELDEN 89729 OR 82729 OR ALPHA 58902

PROJECT NAME:		205112 BWM JPB 7/05	
WIRING DIAGRAM		ISSUE	
7000 SERIES (J7ATS) GROUP 5 CONTROLS		SUBSIDIARY DISTRIBUTION	
THIRD ANGLE PROJECTION		<input type="checkbox"/> AE <input type="checkbox"/> AN <input type="checkbox"/> AM <input type="checkbox"/> AJ <input type="checkbox"/> AL <input type="checkbox"/> <input type="checkbox"/> CH <input type="checkbox"/> AV <input type="checkbox"/> AA <input type="checkbox"/> PS <input type="checkbox"/> AR <input type="checkbox"/> <input type="checkbox"/> AG <input type="checkbox"/> AP <input type="checkbox"/> AC <input type="checkbox"/> AS <input type="checkbox"/>	
DRAWN BY: BWM 7/05		COMPUTER GENERATED DRAWING	
CHECKED: []		SCALE: 1:1 ACAD FILE	
DRAFTING APPROVAL: []		SIZE: DWG. NO. DS775442	
FINAL APPROVAL: JPB 7/05		ASCO POWER TECHNOLOGIES, L.P. FLORHAM PARK, NEW JERSEY 07932 U.S.A.	
CHANGE LETTER: []		ECON. NO.: 205112 SHEET 2 OF 6	


EMERGENCY

NORMAL

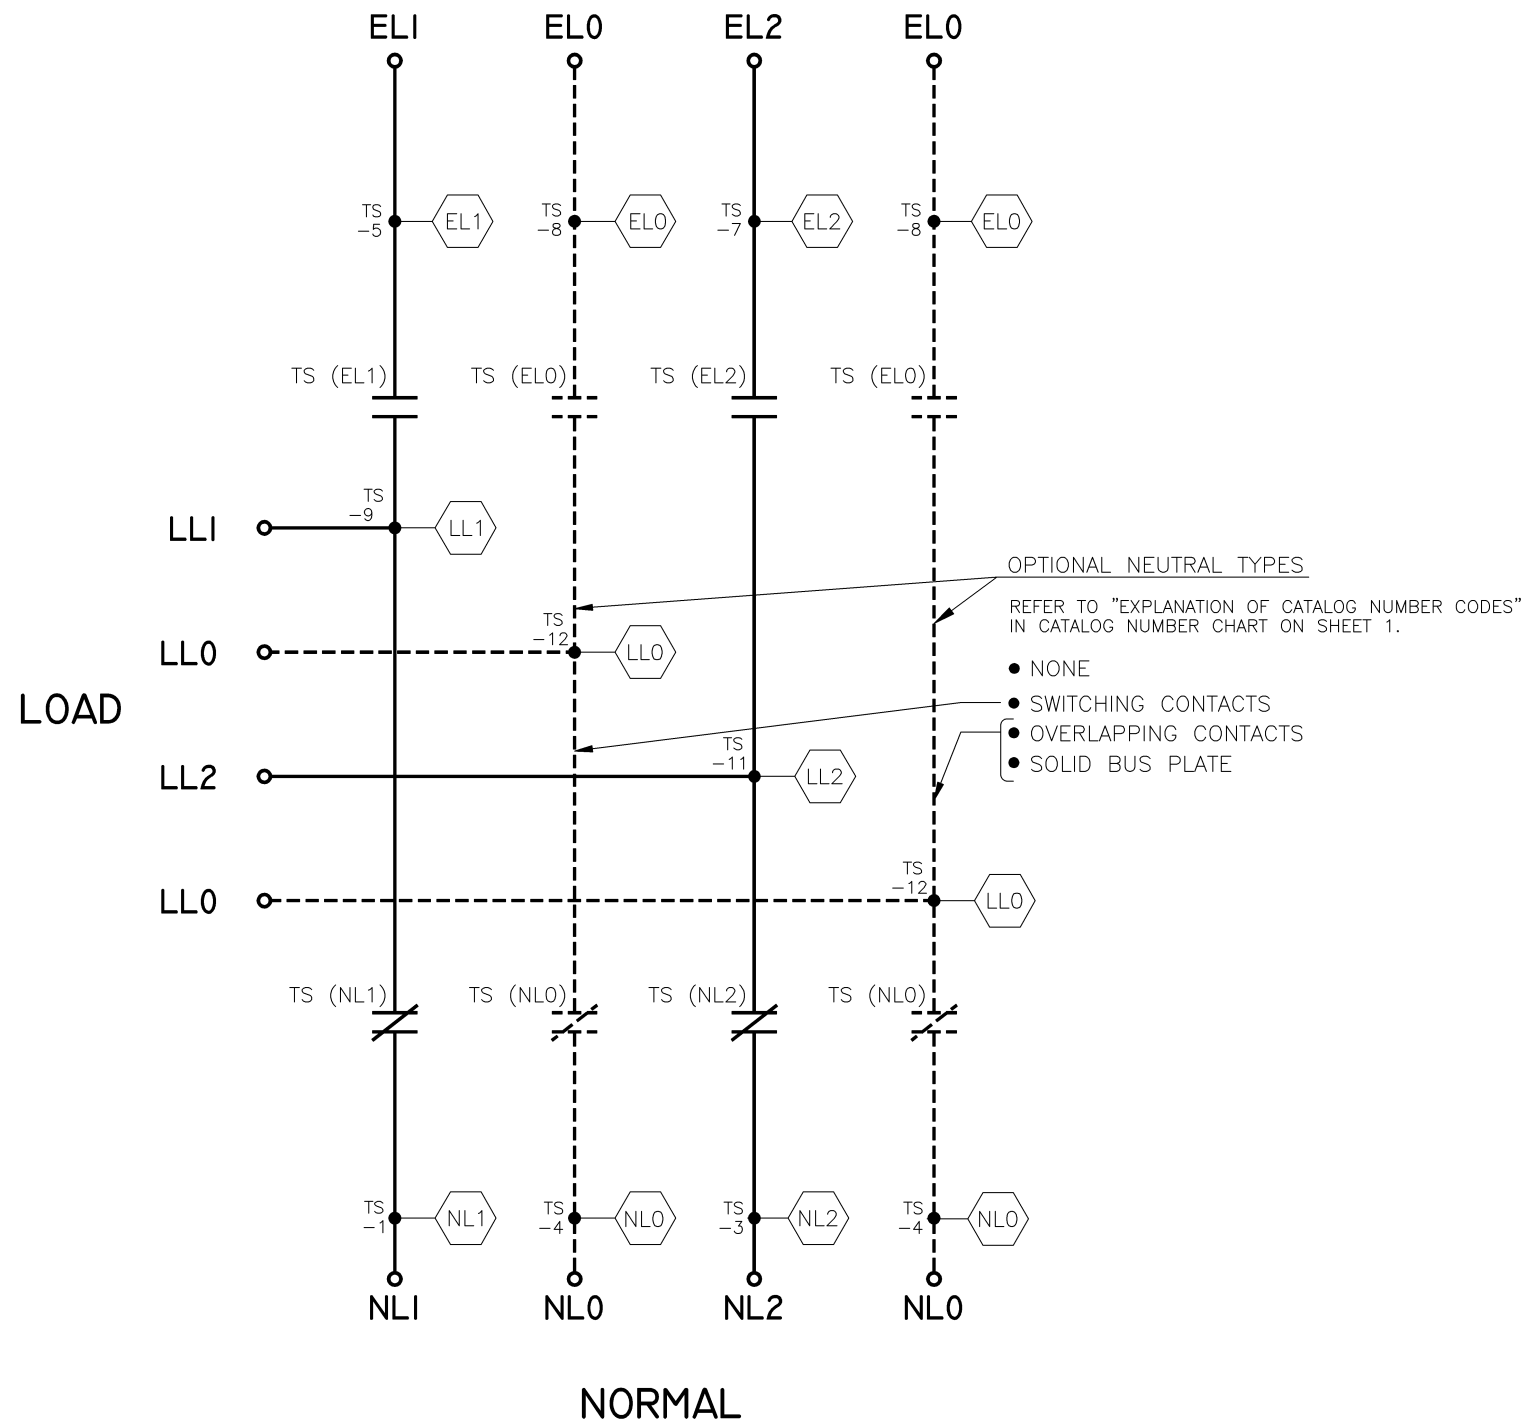

NORMAL

EMERGENCY

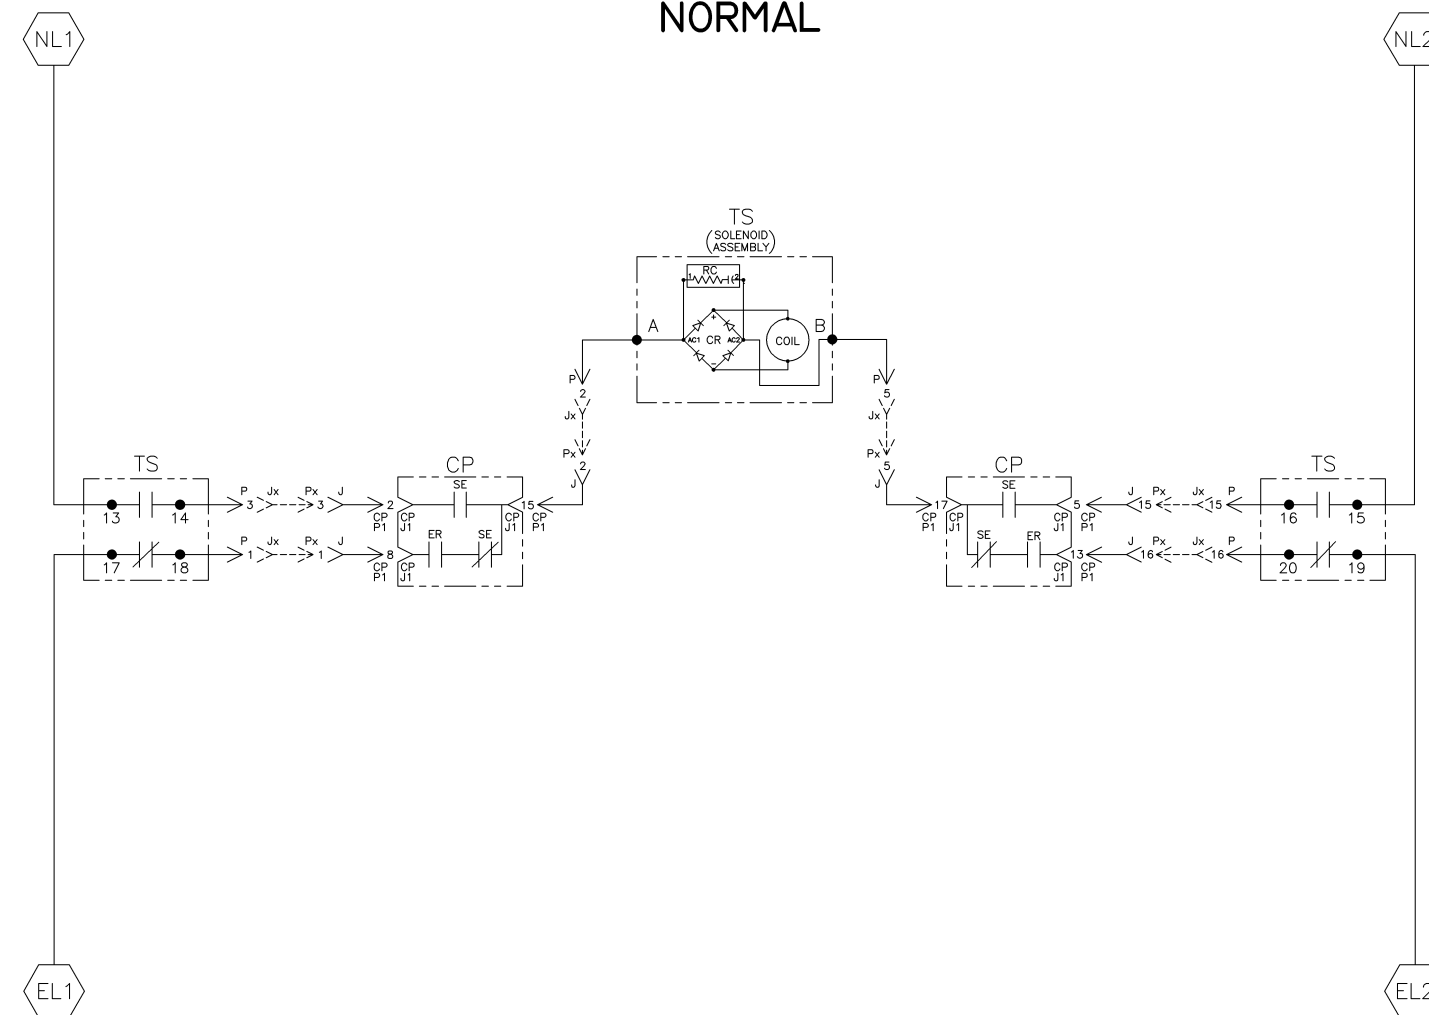

NOTE:
ATS SHOWN CLOSED ON NORMAL SOURCE.

TS	SOLENOID POSITION			
	CLOSED	BEFORE	BEFORE	CLOSED
13-14	✓	✓	✓	✓
15-16	✓	✓	✓	✓
17-18	✓	✓	✓	✓
19-20	✓	✓	✓	✓


TDC (TOP DEAD CENTER)
TRANSFER SWITCH TEST & ADJUSTMENT PROCEDURE
SPECIFIES CONTROL CUT-OFF (CONTACT OPENING)
SETTING.

PROJECT NAME:		205112 BWM JPB 7/05	
WIRING DIAGRAM		ISSUE	
7000 SERIES (J7ATS) GROUP 5 CONTROLS		SUBSIDIARY DISTRIBUTION	
THIRD ANGLE PROJECTION		AE <input type="checkbox"/> AN <input type="checkbox"/> AM <input type="checkbox"/> AJ <input type="checkbox"/> AL <input type="checkbox"/> CH <input type="checkbox"/> AV <input type="checkbox"/> AA <input type="checkbox"/> PS <input type="checkbox"/> AR <input type="checkbox"/> AG <input type="checkbox"/> AP <input type="checkbox"/> AC <input type="checkbox"/> AS <input type="checkbox"/>	
DRAWN BY: BWM 7/05		ASSEMBLY REF. NO.	
CHECKED:		SCALE: 1:1 ACAD FILE	
DRAFTING APPROVAL:		SIZE: DWG. NO.	
FINAL APPROVAL: JPB 7/05		DS 775442	
ASCO POWER TECHNOLOGIES, L.P.		CHANGE LETTER: ECN NO. 205112 SHEET 3 OF 6	

EMERGENCY SOURCE CIRCUITS

ADDITIONAL CIRCUITS

EMERGENCY

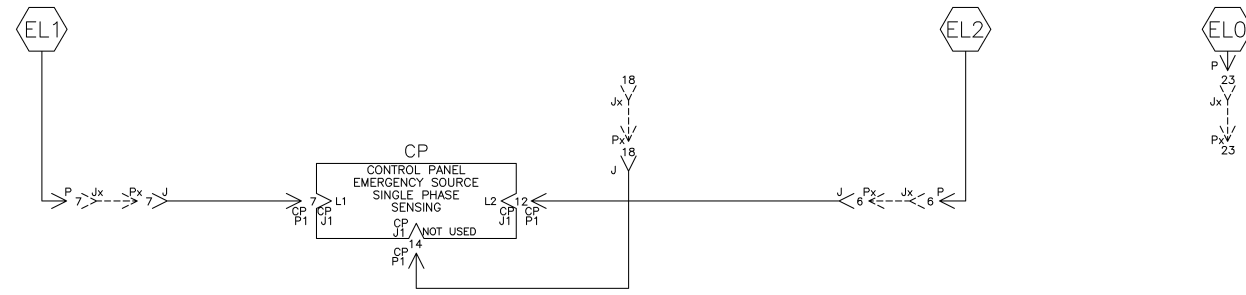


LOAD TERMINAL CIRCUITS

LOAD




NORMAL SOURCE CIRCUITS

NORMAL

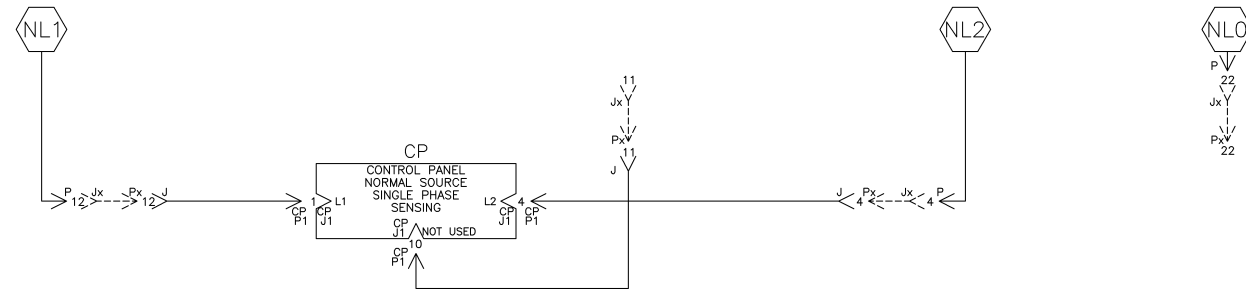

CONTROL CIRCUITS


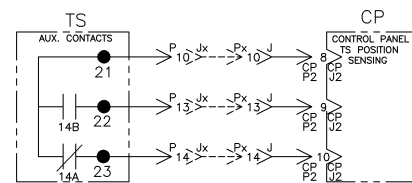


PROJECT NAME:		205112		BWM		JPB		7/05	
ISSUE		ECON NO.		BY		APP.		DATE	
SUBSIDIARY DISTRIBUTION		AE		AM		AJ		AL	
CH		AV		AA		PS		AR	
AG		AP		AC		AS		AS	
THIRD ANGLE PROJECTION		MANUFACTURING TOLERANCES TO BE IN ACCORDANCE WITH ASCO PROCEDURE MP-1-003. FOR PLASTIC PARTS SEE MP-1-005.		ASSEM. REF. NO.		SCALE		1:1	
DRAWN BY		BWM		DATE		7/05		ACAD	
CHECKED				DATE				FILE	
DRAWING APPROVAL				DATE				SIZE	
FINAL APPROVAL		JPB		DATE		7/05		DWG. NO.	
ASCO		ASCO POWER TECHNOLOGIES, L.P.		FLORHAM PARK, NEW JERSEY 07932 U.S.A.		DS		775442	
CHANGE LETTER		ECON NO.		205112		SHEET		4 OF 6	




PHYSICAL DIAGRAM

ENCLOSURE



TS (TRANSFER SWITCH)
VIEW FROM INSIDE FRONT

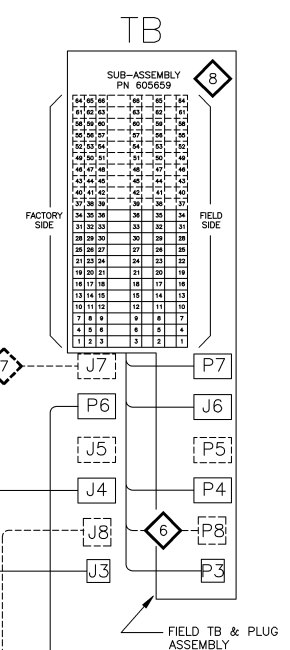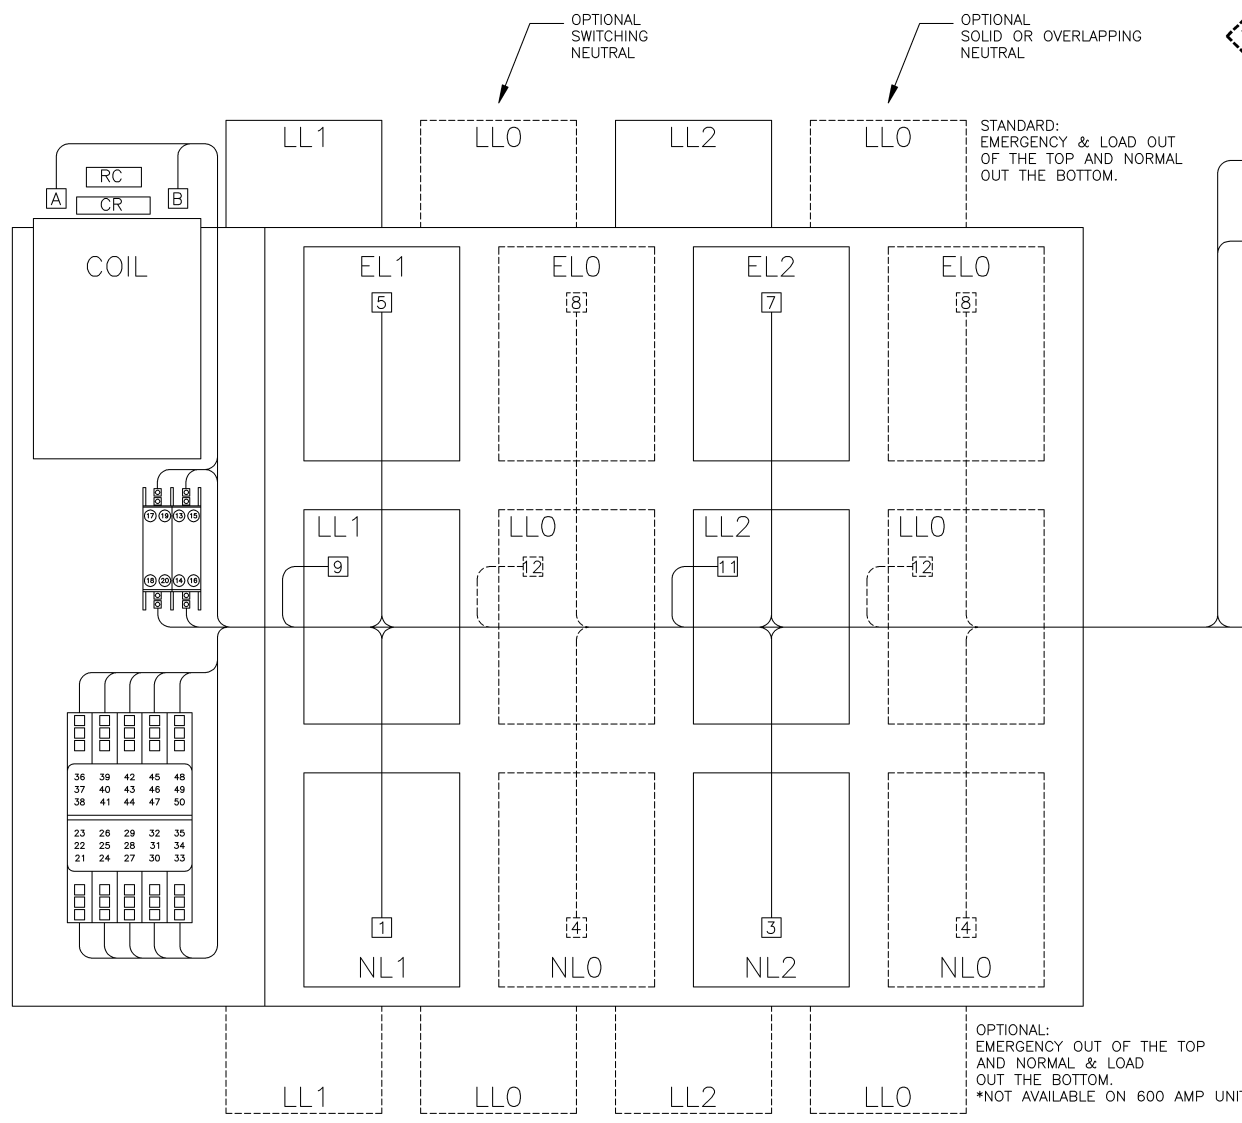

TOP DOOR (INSIDE)

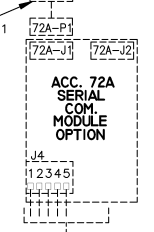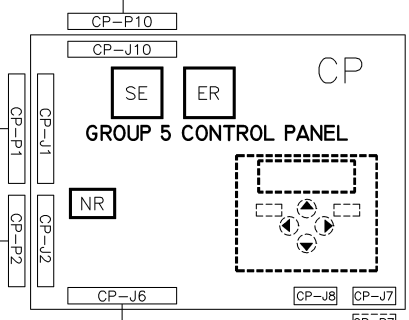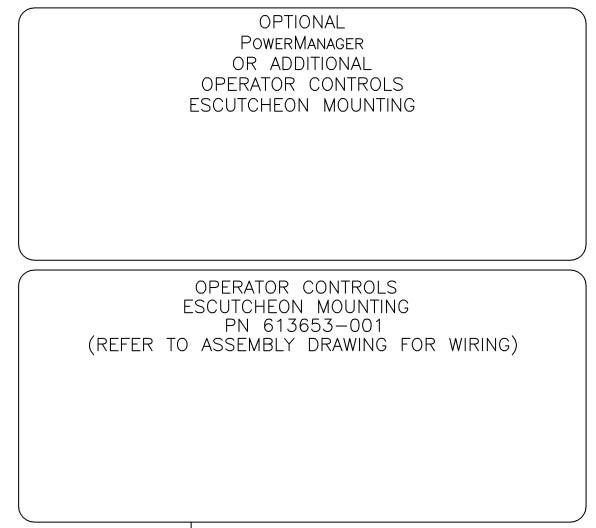

ASCO OPTIONAL SERIAL COMMUNICATION DEVICE

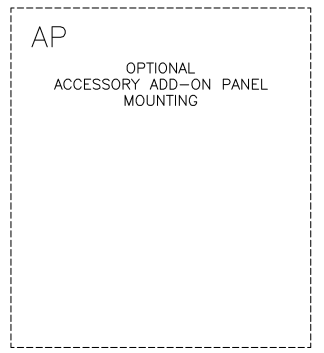

PROJECT NAME:		205112		BWM JPB		7/05	
ISSUE		ECON NO.		BY		DATE	
SUBSIDIARY DISTRIBUTION		MANUFACTURING TOLERANCES TO BE IN ACCORDANCE WITH ASCO PROCEDURE MP-1-003. FOR PLASTIC PARTS SEE MP-1-005		ASSEM. REF. NO.		COMPUTER GENERATED DRAWING	
AE	AN	AM	AJ	AL	AR	AS	AT
CH	AV	AA	PS	AR	AR	AR	AR
AG	AP	AC	AS	AS	AS	AS	AS
DRAWN BY		DATE		SCALE		FILE	
BWM		7/05		1:1		ACAD	
CHECKED		DATE		SIZE		DWG. NO.	
JPB		7/05		DS		775442	
DRAWING APPROVAL		PROPERTY OF ASCO POWER TECHNOLOGIES. USE PERMITTED FOR OUR WORK ONLY. ALL RIGHTS OF DESIGN OR INVENTION ARE RESERVED.		CHANGE LETTER		ECON NO.	
JPB		ASCO POWER TECHNOLOGIES, L.P. FLORHAM PARK, NEW JERSEY 07932 U.S.A.		205112		5 OF 6	

WIRE RUN LISTING

HARNESS LOCATOR 1 HARNESS 619510-062 (P,J3,J4) MAIN TS CLR AWG 16

HARNESS LOCATOR 3 HARNESS 309320-005 OPTIONAL 8" EXTENSION HARNESS CLR AWG 16

HARNESS LOCATOR 7 HARNESS (J7) OPTIONAL FIELD OUTPUTS ADD WIRES CLR AWG 16

Table with columns: WIRE No., ADDITIONAL WIRING, CLR, AWG. Contains various wire identifiers and assembly details.

HARNESS LOCATOR 2 HARNESS 483763 (J,CP-P1,CP-P2) CONTROL PANEL CLR AWG 16

HARNESS LOCATOR 5 HARNESS 605454-005 (J8) OPTIONAL SERIAL I/O CLR AWG 22 (12 COND)

HARNESS LOCATOR 8 SUB-ASSEMBLY 605659 (P3,P4,J6,P7,TB) STD. FIELD TB CLR AWG 16

HARNESS LOCATOR 6 HARNESS 605454-007 (P8,TB) OPTIONAL SERIAL I/O CLR AWG 22 (4 COND)

PROJECT NAME: WIRING DIAGRAM 7000 SERIES (J7ATS) GROUP 5 CONTROLS. Includes drawing details, scale, and manufacturer information (ASCO).