

Safety Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to either a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE


NOTICE is used to address practices not related to physical injury.



Safety Message

- Adhere to all national and local electrical codes.
- All wiring must be performed by a qualified electrician.
- Changes and modifications to this unit not expressly approved by APC by Schneider Electric could void the warranty.
- This product is intended for indoor use only.
- Do not operate this product in direct sunlight, in contact with fluids, or where there is excessive dust or humidity.
- Do not block the air vents on the AVR. Allow adequate space for proper ventilation. Allow 7.9 inch (20 cm) minimum vent clearance to the side and above the unit.

20cm (7.9 in)
min. vent clearance
requirement on left/right
and top

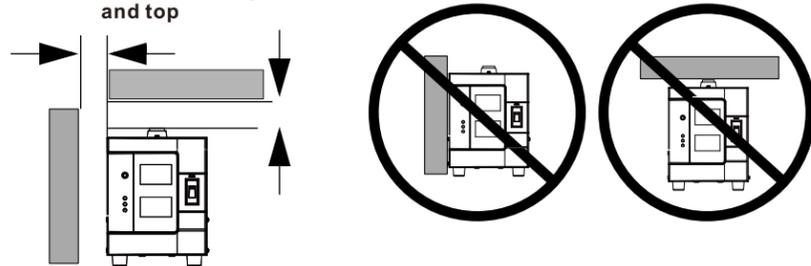

Product Description

The Line-R automatically corrects brownouts (by boosting low voltage) and overvoltages (by stepping down high voltage) from the power utility service to levels that are acceptable for computers, as well as other sensitive equipment. APC by Schneider Electric Line-R provides a high degree of protection from line voltage sags and swells, and has been designed for reliable, maintenance-free service. This LSW model includes a time delay function that can eliminate transients that affect connected equipment, input and output voltage displays as well as a startup countdown time display.

Applications


Note: The total power consumption of all equipment plugged into the Line-R must not exceed the “Maximum Output Power Capacity” rating listed in the *Specifications* table.

The Line-R is designed for use with voltage sensitive equipment such as computers, monitors, printers, scanners, televisions, stereos or other AV equipment.


Do not use with life sustaining equipment and any device with a power requirement exceeding the “Acceptable Voltage Range” rating listed in the *Specifications* table.

Features

Top Panel		
1	Power LED	Illuminates when input voltage is within normal range
2	AVR LED	Illuminates when input voltage is below or higher the rated Input Voltage Range
3	Power Switch	Use this as the master power switch to turn the Line-R and all connected equipment on (I) or off (O).
4	Output voltage display / Startup countdown display	Shows the voltage output to connected equipment. During startup will show the AVR startup delay countdown
5	Input voltage display	Shows the input voltage from mains power
6	Handle	Handle for easy lifting
7	AVR Startup Switch	Startup delay to avoid damage to devices with AC motor from consecutive starts.
8	Over-voltage / under-voltage indicator	Shows the state of the input utility power, if it is more or less than the rated input voltage

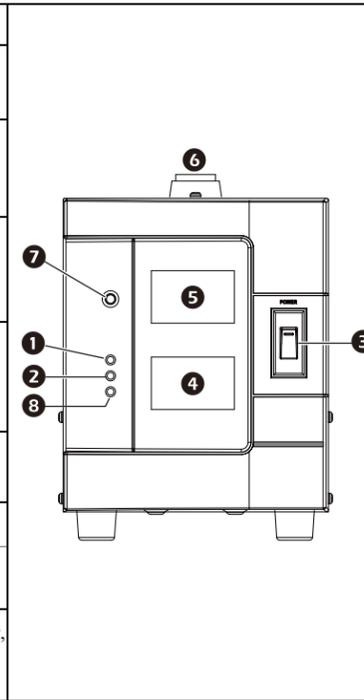

Rear Panel		
1	AC Outlets	These outlets supply power to connected equipment when the Line-R is connected to AC power
2	AC Power Cord	Use this cable to connect the Line-R to AC power.

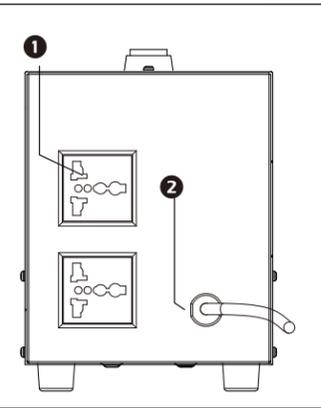

Installation

- Plug the Line-R into a Wall Outlet - Plug the Line-R into a wall socket. Connect your computer or other electronic equipment to any of the two outlets on the back panel of the Line-R. The Line-R should only be used in buildings that have proper grounding on a branch circuit protected by a fuse or circuit breaker.
- **Connect Your Equipment** - Plug equipment into the Line-R back-panel outlets and switch the equipment ON. The equipment will not be powered until the Line-R is switched on.
Note: The total power consumption of all equipment plugged into the Line-R must not exceed the ratings listed in the *Specifications* table below.
- **Switch ON the Line-R** - Press the front panel power switch to the on (I) position. This switch may be used as the master switch for the device and all equipment connected to it.
- **AVR Startup Switch**
 - **Delay:** Toggle the switch to the depressed position results in a 3 minute delay before the AVR is functioning. For use with refrigerators, freezers, air conditioners or dehumidifiers.
 - **Normal:** Toggle the switch to the un-depressed position results in a 10 second delay before the AVR is functioning. For use with home appliances such as televisions, stereos, CD/DVD players, VCRs, modems, and telephone equipment.

Specifications

Characteristics	LSW3000-IND
Maximum Output Power Capacity	1500 W or 3000 VA
Nominal Output Voltage	230V
Nominal Input Current	9.37 A
Acceptable Voltage Range Tolerance	160-284 VAC
Surge Energy	312 Joules
Rated Input Voltage	230 Vac
Maximum Acceptable Input Voltage	284 Vac
Output Regulation	±10%
Response Time	6 ms
Efficiency	>95%
Nominal Frequency	50 Hz
Number of Outlets	2
Operating Temperature	32 - 104 F (0 - 40 C)
Relative Humidity	0-90% Non-condensing
Dimensions	10.1 x 4.7 x 6.2 inches (258 x 120 x 158 mm)
Weight	6.98 kg (15.4 lb)

Limited Warranty

Schneider Electric IT (SEIT) warrants its products to be free from defects in materials and workmanship for a period of two years from the date of purchase. SE IT obligation under this warranty is limited to repairing or replacing, at its sole discretion, any such defective products. This warranty does not apply to battery wear from use, equipment that has been damaged by accident, negligence or misapplication or has been altered or modified in any way. SEIT standard procedure is to replace the original unit with a factory reconditioned unit. Customers who must have the original unit back due to the assignment of asset tags and set depreciation schedules must declare such a need at first contact with an SEIT Technical Support representative. SEIT will ship the replacement unit once the defective unit has been received by the repair department, or cross ship upon the receipt of a valid credit card number. The customer pays for shipping the unit to SEIT. SEIT pays ground freight transportation costs to ship the replacement unit to the customer. For full warranty information refer to www.apc.com.

APC by Schneider Electric IT Customer Support Worldwide

For country specific customer support, go to the APC by Schneider Electric Web site, www.apc.com.