

SCADAPack E

5414 Digital Input Module Hardware Manual

Version: 8.14.3

Date: August 2017



Table of Contents

1	Legal Information	4
2	Technical Support	5
3	Safety Information	6
4	Overview	9
5	Installation	10
6	DIP Switch Settings	14
7	Operation and Maintenance	15
	7.1 Troubleshooting	15
8	Specifications	16
9	Approvals and Certifications	19

1 Legal Information

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

Trademarks

Schneider Electric, ClearSCADA, SCADAPack, Trio, Modbus, and StruxureWare are trademarks and the property of Schneider Electric SE, its subsidiaries and affiliated companies. All other trademarks are the property of their respective owners.

Address

Schneider Electric

415 Legget Drive, Suite 101, Kanata, Ontario K2K 3R1 Canada

Direct Worldwide: +1 (613) 591-1943

Fax: +1 (613) 591-1022

Toll Free within North America: 1 (888) 267-2232

www.schneider-electric.com

© 2014 - 2017 Schneider Electric Canada Inc.

All rights reserved.

2 Technical Support

Questions and requests related to any part of this documentation can be directed to one of the following support centers.

Technical Support: Americas, Europe, Middle East, Asia

Available Monday to Friday 8:00am – 6:30pm Eastern Time

Toll free within North America 1-888-226-6876

Direct Worldwide +1-613-591-1943

Email supportTRSS@schneider-electric.com

Technical Support: Australia

Inside Australia 1300 369 233

Email au.help@schneider-electric.com

3 Safety Information

Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a Danger or Warning safety label indicates that an electrical hazard exists, which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **can result in** death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **can result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Before You Begin

Do not use this product on machinery lacking effective point-of-operation guarding. Lack of effective point-of-operation guarding on a machine can result in serious injury to the operator of that machine.

 WARNING
EQUIPMENT OPERATION HAZARD <ul style="list-style-type: none">• Verify that all installation and set up procedures have been completed.• Before operational tests are performed, remove all blocks or other temporary holding means used for shipment from all component devices.• Remove tools, meters, and debris from equipment. Failure to follow these instructions can result in death or serious injury.

Follow all start-up tests recommended in the equipment documentation. Store all equipment documentation for future reference.

Test all software in both simulated and real environments.

Verify that the completed system is free from all short circuits and grounds, except those grounds installed according to local regulations (according to the National Electrical Code in the U.S.A, for instance). If high-potential voltage testing is necessary, follow recommendations in equipment documentation to help prevent accidental equipment damage.

Operation and Adjustments

The following precautions are from the NEMA Standards Publication ICS 7.1-1995 (English version prevails):

- Regardless of the care exercised in the design and manufacture of equipment or in the selection and ratings of components, there are hazards that can be encountered if such equipment is improperly operated.
- It is sometimes possible to misadjust the equipment and thus produce unsatisfactory or unsafe operation. Always use the manufacturer's instructions as a guide for functional adjustments. Personnel who have access to these adjustments should be familiar with the equipment manufacturer's instructions and the machinery used with the electrical equipment.
- Only those operational adjustments actually required by the operator should be accessible to the operator. Access to other controls should be restricted to help prevent unauthorized changes in operating characteristics.

Acceptable Use

SCADAPack E remote Programmable Automation Controllers (rPACs), Remote Terminal Units (RTUs) and input/output (I/O) modules are intended for use in monitoring and controlling non-critical equipment only. They are not intended for safety-critical applications.

WARNING

UNACCEPTABLE USE

Do not use SCADAPack E rPACs, RTUs, or I/O modules as an integral part of a safety system. These devices are not safety products.

Failure to follow this instruction can result in death or serious injury.

CAUTION

EQUIPMENT OPERATION HAZARD

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Use only Schneider Electric software or approved software with Schneider Electric hardware products.

Failure to follow these instructions can result in minor or moderate injury.

4 Overview

The Model 5414 Digital Input module adds 16 discrete inputs to a 5000 I/O system. Up to 16 Model 5414 modules may be installed on an I/O bus to provide a total of 256 digital inputs.

The digital inputs are optically isolated from the logic power. To simplify field wiring, the inputs are grouped with eight inputs sharing a single common return. These groups of eight inputs are isolated from each other.

The Model 5414 Digital Input module is available in four standard voltage ranges, for both AC and DC applications. A current limiting resistor, on each input, determines the voltage range. Light Emitting Diodes (LEDs) on the digital inputs show the status of each input. The digital input LEDs can be disabled to conserve power.



Figure 1: 5414 Digital Input Module

5 Installation

The installation of the 5414 module requires mounting the module on the 7.5mm by 35mm DIN rail and connecting the module to the system I/O Bus. Refer to the *System Configuration Guide* for complete information on system layout, I/O Bus cable routing and module installation.

For ATEX and IECEx applications only

⚠ WARNING

HAZARD OF EXPLOSION

This equipment is to be installed in an enclosure certified for use, providing a degree of protection of IP54 or better. The free internal volume of the enclosure must be dimensioned in order to keep the temperature rating. A T4 rating is acceptable.

Failure to follow these instructions can result in death or serious injury.

Field Wiring

The 5414 module provides 16 digital inputs. The input voltage range is set at the factory. The inputs are grouped with eight inputs sharing a single common return. The groups are isolated from each other. The 5414 module provides 16 digital inputs. The input voltage range is set at the factory. The inputs are grouped with eight inputs sharing a single common return. The groups are isolated from each other.

NOTICE

UNEXPECTED EQUIPMENT OPERATION

Do not exceed the maximum voltage specified for each digital input.

Failure to follow these instructions can result in equipment damage.

⚠ WARNING

HAZARD OF ELECTRIC SHOCK

Remove power from all devices before connecting or disconnecting inputs or outputs to any terminal or installing or removing any hardware.

Failure to follow these instructions can result in death or serious injury.

The 5414 module accommodates AC or DC inputs. Observe signal polarity when using DC inputs. Connect the positive signal to the input. Connect the negative signal to the common return.

Figure 2: AC Input Wiring Example and **Figure 3: DC Input Wiring Example** show typical field wiring.

Controller, modem and I/O modules use screw termination style connectors for termination of field wiring. They accommodate solid or stranded wires from 22 to 12 AWG.

The connectors are removable. This allows module replacement without disturbing the field wiring. Leave enough slack in the wiring for the connector to be removed.

Remove power before servicing unit.

To remove the connector:

- Pull the connector upward from the board. Apply even pressure to both ends of the connector.

To install the connector:

- Line up the pins on the module with the holes in the connector.
- Push the connector onto the pins. Apply even pressure to both ends of the connector.

AC Input Wiring

Figure 2: AC Input Wiring Example shows typical wiring of AC signals to the digital input ports. The Model 5414 is available in different input voltage ranges. Check that the specific range of the input module is not exceeded.

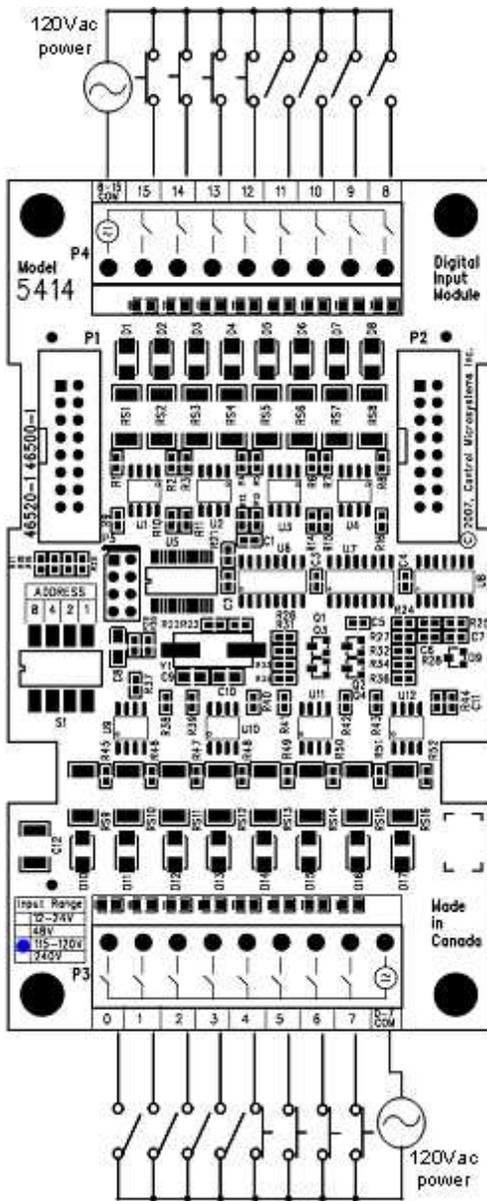


Figure 2: AC Input Wiring Example

DC Input Wiring

Figure 3: DC Input Wiring Example shows typical wiring of DC signals to the digital input ports. Observe signal polarity when using DC input signals. The Model 5414 is available in different input voltage ranges. Check that the signals monitored are in the specified range of the input module.

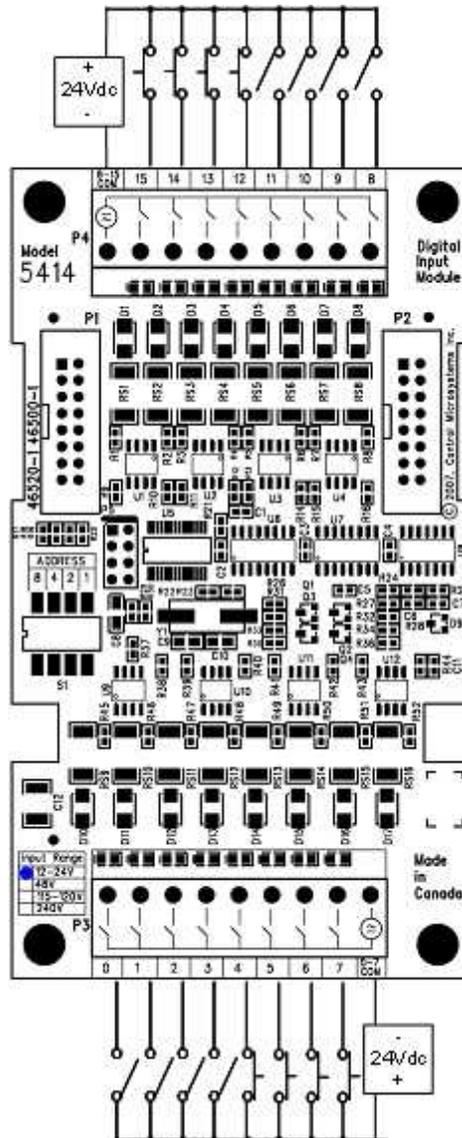


Figure 3: DC Input Wiring Example

6 DIP Switch Settings

Address Selection

5000 Series I/O module types may be combined in any manner to the maximum supported by the controller used.

Each type of I/O module, connected to the I/O bus, has a unique I/O module address. Different types of I/O modules may have the same module address.

The address range supported by the SCADAPack controller module may restrict the I/O module address range. Refer to the controller manual for the maximum address supported.

Each analog input module has a unique set of channels. The four address switches labeled 1, 2, 4 and 8 set the module address. To set the address:

- Open the four switches by sliding the actuator to the left side of the switch.
- Slide actuators to the right such that they total the desired address.

Switch settings for each of the 16 module addresses are shown in **Figure 4: 5414 Digital Input Module Address Switches**.

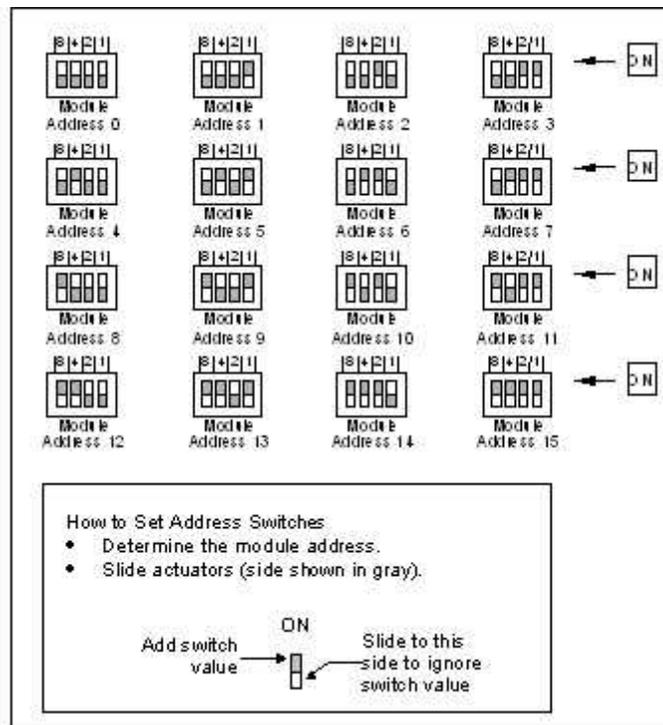


Figure 4: 5414 Digital Input Module Address Switches

7 Operation and Maintenance

LED Indicators

The Model 5414 Digital Input Module has one red status LED per I/O point. This LED is on when the input is monitoring a voltage greater than the minimum rated input voltage.

The digital input status LED is located between the field wiring terminal connector and the module cover.

The LEDs can be disabled by the controller board to conserve power. Refer to the manual of your controller board for details on disabling the LEDs.

Maintenance

This module requires no routine maintenance. If the module is not functioning correctly, contact Schneider Electric Technical Support for more information and instructions for returning the module for repair.

7.1 Troubleshooting

Condition	Action
Input LED does not come on when input signal is applied.	Check the input signal at the termination block. It should be at least 50% of the digital input range. If this is a DC input, check the polarity of the signal.
Input is on when no signal is applied. The LED is off.	Check that the digital inputs are not forced on.
Input is off when a signal is applied. The LED is on.	Check that the digital inputs are not forced off.

8 Specifications

Disclaimer: Schneider Electric reserves the right to change product specifications without notice. For more information visit <http://www.schneider-electric.com>.

General

I/O Terminations	12 to 22 AWG 15A contacts Screw termination - 6 lb.-in. (0.68 Nm) torque
Dimensions	2.90 inch (74mm) wide 4.90 inch (124mm) high 1.80 inch (45mm) deep
Packaging	corrosion resistant zinc plated steel with black enamel paint
Environment	5% RH to 95% RH, non-condensing -40°C to 70°C (-40°F to 158°F) operation -40°C to 85°C (-40°F to 185°F) storage
Addressing	16 modules. DIP switch selectable.

Power Supply

5V power requirements	6mA with LEDs off 40mA with LEDs on
11-30Vdc power requirements	none

Digital Inputs

Quantity	16	
Ranges	Factory configurable 12/24V 48V 115/125V 240V	
Over-voltage Tolerance	150% sustained over-voltage without damage	
Voltages	Maximum permitted voltage in Canada or North America is 240Vac. Maximum permitted voltage outside of Canada or North America is 30Vac/42.4Vpk/60Vdc.	
DC Input Current	0.6 – 0.9mA at 24V on the 12/24V range 0.3 – 0.4mA at 48V on the 48V range 0.3 – 0.4mA at 120V on the 115/125V range 0.3 – 0.4mA at 240V on the 240V range	
AC Input Current	0.25 – 0.5mA at 24V on the 12/24V range 0.15 – 0.25mA at 48V on the 48V range 0.15 – 0.25mA at 120V on the 115/125V range 0.15 – 0.25mA at 240V on the 240V range	
Input Logic-HI Level	OFF to ON transition threshold is typically 5.5V on 12/24V range OFF to ON transition threshold is typically 50% of full scale range on other ranges.	
DC Input Voltage 12V/24V 48V 115/125V 240V	On/Off Threshold 6 – 7Vdc 17 – 27Vdc 55 – 75Vdc 110 – 150Vdc	
AC Input Voltage 12V/24V 48V 115/125V 240V	Off – To – On 4.5 – 6.5Vrms 16 – 24Vrms 40 – 60Vrms 80 – 120Vrms	On – To – Off 4.0 – 6.0Vrms 15 – 23Vrms 37 – 57Vrms 75 – 115Vrms
Connectors	2 removable. 9 positions.	
Isolation	Isolation is in 2 groups of 8. Isolation from logic supply and chassis. 250Vac/1000Vdc.	
Indicators	Logic powered LEDs. Can be disabled to conserve power.	

9 Approvals and Certifications

Hazardous Locations - North America	Suitable for use in Class I, Division 2, Groups A, B, C and D Hazardous Locations. Temperature Code T4 CSA certified to the requirements of: <ul style="list-style-type: none"> CSA Std. C22.2 No. 213-M1987 - Hazardous Locations.
Hazardous Locations - Europe	5414-24 (24V DI version) only ATEX II 3G, Ex nA IIC T4 per EN 60079-15, protection type n (Zone 2)
Hazardous Locations	IECEX, Ex nA IIC T4 per IEC 60079-15, protection type n (Zone 2)
ATEX and IECEX Applications only	This equipment is to be installed in an enclosure certified for use, providing a degree of protection of IP54 or better. The free internal volume of the enclosure must be dimensioned in order to keep the temperature rating. A T4 rating is acceptable. For products using Solid State Relays (5415, 5606 and 5607 modules and SCADAPack using 5606 and 5607 modules) A T4 rating is acceptable for maximum loads of 2A. When 3A loads are connected to the Solid State Relays, the maximum ambient rating is lowered to 50°C in order to maintain the T4 rating.
Safety	CSA (cCSAus) certified to the requirements of: CSA C22.2 No. 142-M1987 and UL916. (Process Control Equipment, Industrial Control Equipment) in Canada and USA. UL (cULus) listed: UL508 (Industrial Control Equipment)
Digital Emissions	FCC 47 Part 15, Subpart B, Class A Verification EN61000-6-4: 2007 Electromagnetic Compatibility Generic Emission Standard Part2: Industrial Environment C-Tick compliance. Registration number N15744.
Immunity	EN61000-6-2: 2005 Electromagnetic Compatibility Generic Standards Immunity for Industrial Environments
Declaration	This product conforms to the above Emissions and Immunity Standards and therefore conforms with the requirements of Council Directive 2014/30/EU (as amended) relating to electromagnetic compatibility and is eligible to bear the CE mark. The Low Voltage Directive 2014/35/EU applies to devices operating within 75 to 1500 Vdc and/or 50 to 1000 Vac. This Directive is not applicable to this product when installed according to our specifications.

Schneider Electric

415 Legget Drive, Suite 101, Kanata, Ontario K2K 3R1 Canada

Direct Worldwide: +1 (613) 591-1943

Fax: +1 (613) 591-1022

Toll Free within North America: 1 (888) 267-2232

www.schneider-electric.com

Copyright © 2014 - 2017 Schneider Electric Canada Inc. All Rights Reserved.